



Toshiba Satellite L455-S5046 The Fan Replacement

We will be demonstrating how to remove then replace the fan of the Toshiba Satellite L455-S5046. Which needs to be replaced if your computer is overheating.

Written By: Daryl Spurgeon



INTRODUCTION


In this guide we will teach you how to replace the fan on your laptop. Be sure to read the Satellite L455-S5046 Troubleshooting Guide to see if a replacement is necessary.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

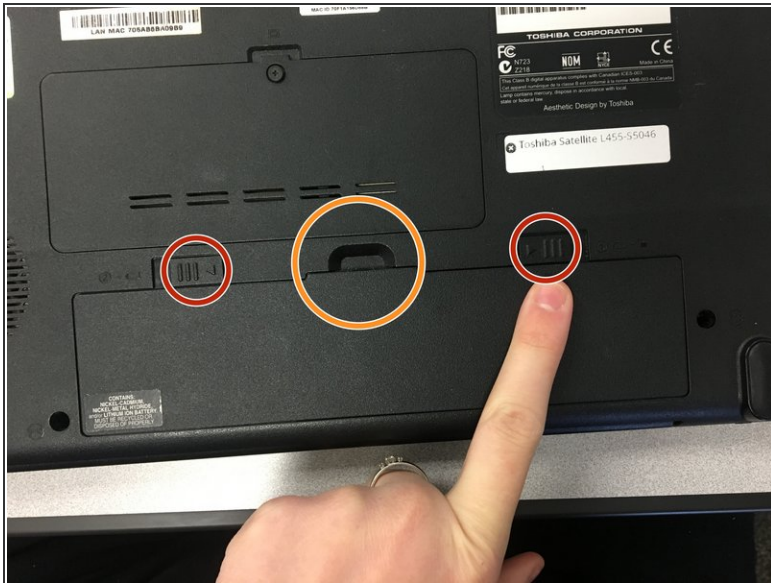


- Find the battery on the back of the computer. Slide both tabs outward towards the side of the laptop and the battery will come loose.
- Insert your finger under the middle tab and lift the battery out.

Step 2 — Fan

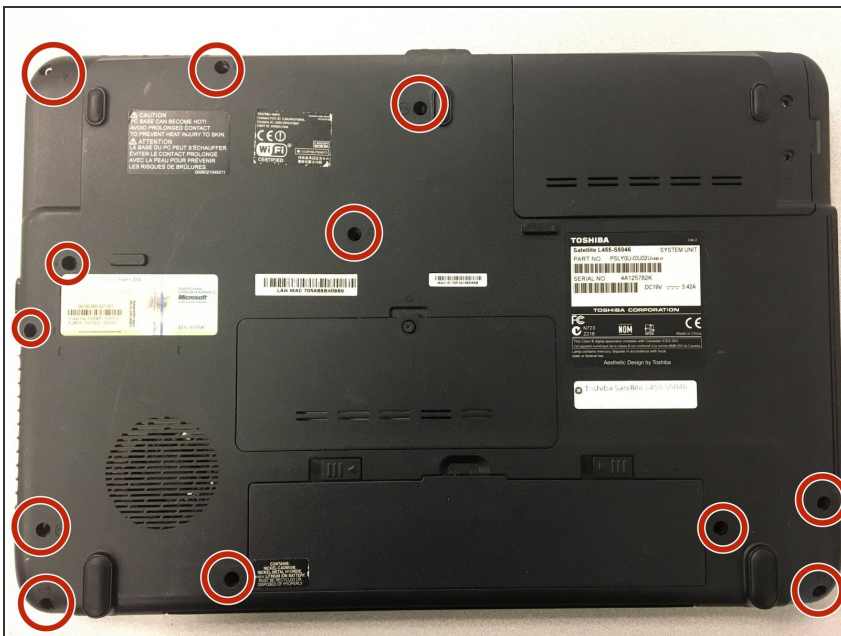



- Start on the back and unscrew the 12 Phillips #0 11-mm screws holding the back cover down.

Step 3

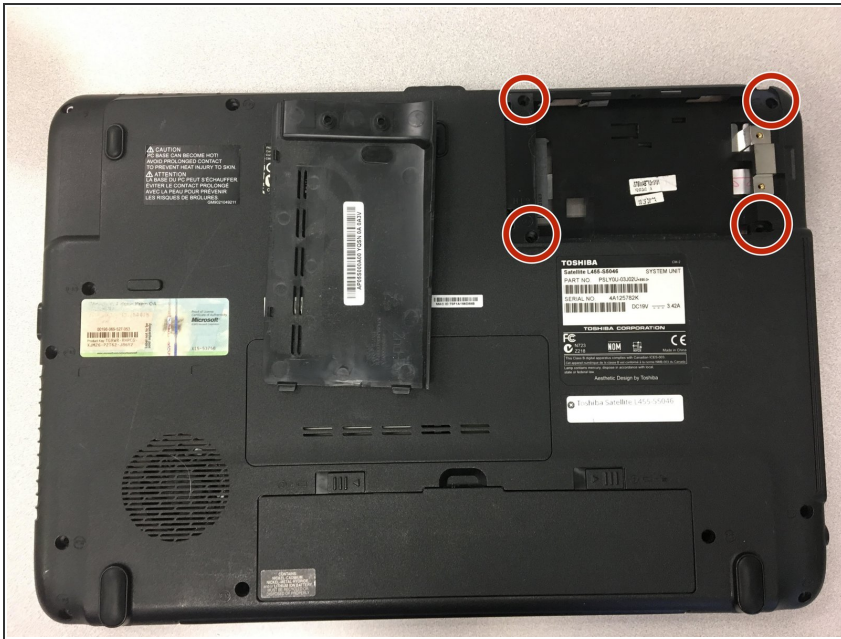


- Pop off the hard drive cover, and then unscrew the four 11-mm Phillips #0 screws.

Step 4

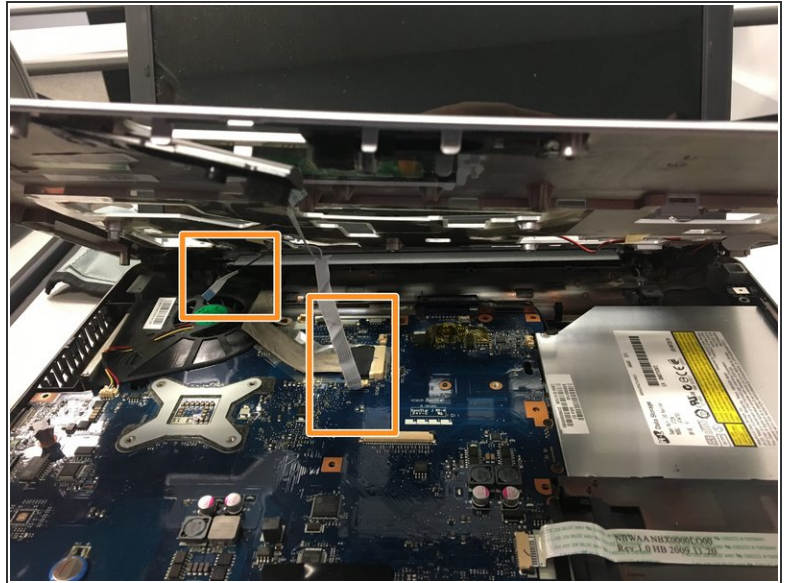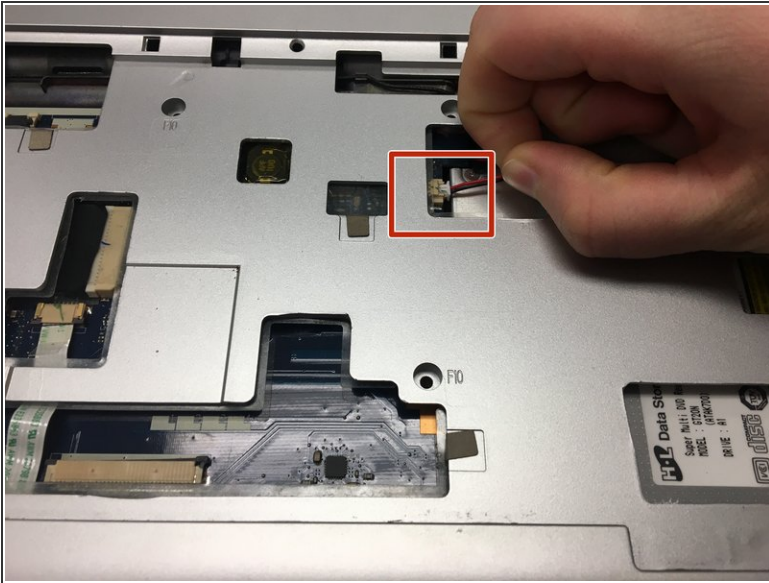

- Flip the laptop over. Remove the keyboard as instructed in the keyboard replacement guide.
- Gently remove the connector visible in the upper right hand corner of the laptop by pulling to the right.
- Remove the cover slowly. There will be two other connectors on the underside that can be removed by pulling gently.

Step 5

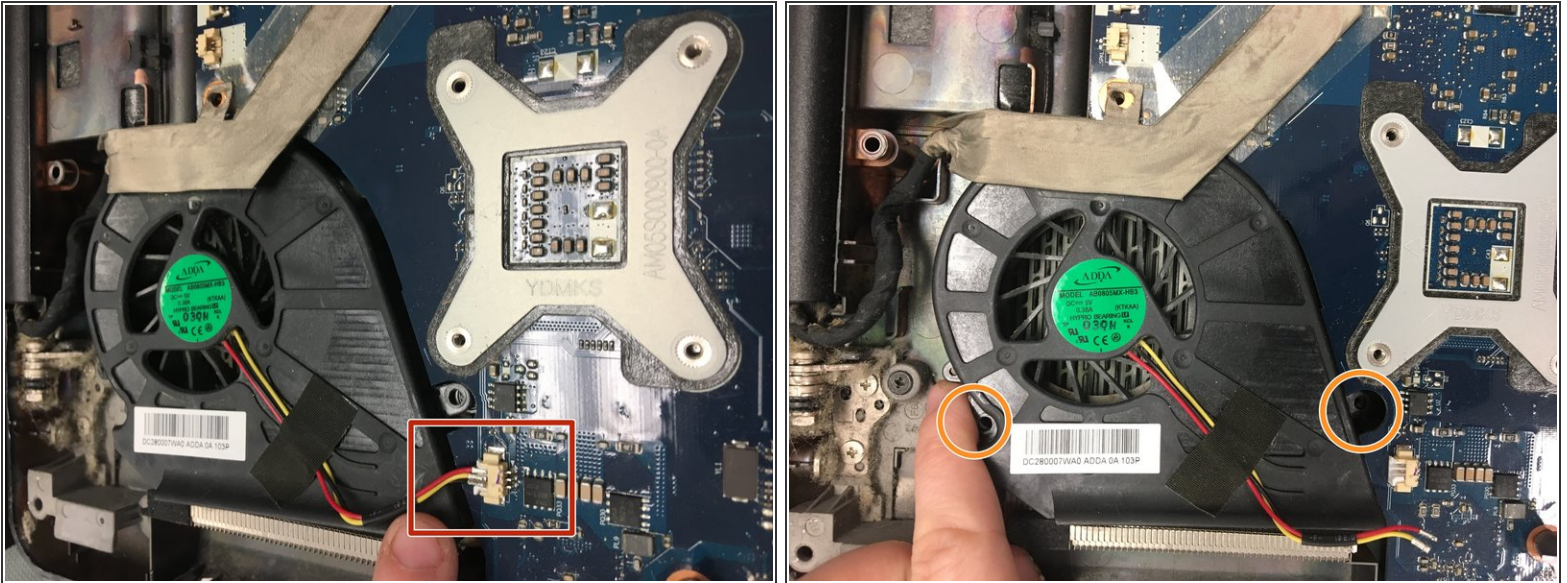

- Remove the connector between the fan and the laptop by pulling gently to the left.
- Remove the two indicated 11-mm Phillips #0 screws.

Step 6



- Now gently lift the fan and pull out.

To reassemble your device, follow these instructions in reverse order.