



Samsung Galaxy Tab 3 10.1 LED Light Replacement

Written By: Corey Brown





TOOLS:

- [iFixit Opening Picks set of 6](#) (1)
-

Step 1 — Rear Case



- Insert an opening pick between the rear case and the plastic rim.
- ⓘ You may need to add multiple picks to detach the clips.
- Slide the pick along the edge of the rear case until you release the plastic clips attaching the rear case to the display.
- Continue to slide the pick around the edge of the rear case until all clips are released.

Step 2



- Lift the case up to remove it.

Step 3 — LED Light



- Insert an opening pick between the plastic frame and the screen.
- Slide the opening pick around the perimeter of the screen.
- ❗ You will hear clicking noises as each plastic clip is released from the display chassis.



Step 4



- Lift the plastic frame to remove.

⚠ Avoid the three delicate ribbon cables.

Step 5

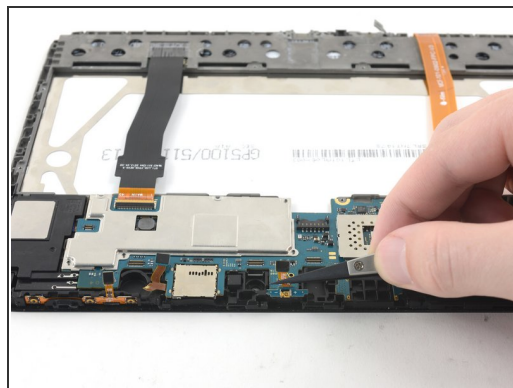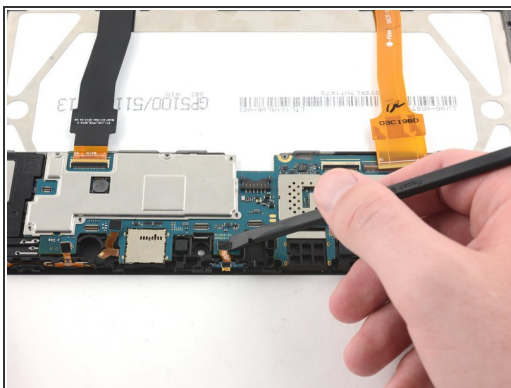

- Use the flat end of the spudger to flip up the press-fit connector attaching the LED to the motherboard.
- Remove the LED indicator light by gently pulling upward with nylon-tipped tweezers.

To reassemble your device, follow these instructions in reverse order.