



Verizon Ellipsis 7 Battery Replacement

This guide will show you how to replace the battery on the Verizon Ellipsis 7.

Written By: Scott Mangin



INTRODUCTION

This guide will teach you how to remove the back and replace the battery on the Verizon Ellipsis 7 tablet. A prying tool is required to remove the back plate of the phone, and the process is not very hazardous. This could be useful to replace a faulty battery or if you have multiple batteries to keep your device running on the go.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery



- Power down device by holding down the power button until the screen goes black.
- Remove the SIM card from the device to prevent damage.
 - To remove the SIM card, open the SIM card cover on the side of the device.
 - Push SIM card in and then pull out after hearing a click.


Step 2



- Take off the back panel.
- Pry open the back cover carefully with a plastic opening tool.
- Use the opening tool to disconnect the cover completely. Do not attempt to pull the back cover off with your hands.

⚠ Be sure to pry open all sides of the device. Attempting to take off the back cover when part of it is attached may snap the cover.

Step 3

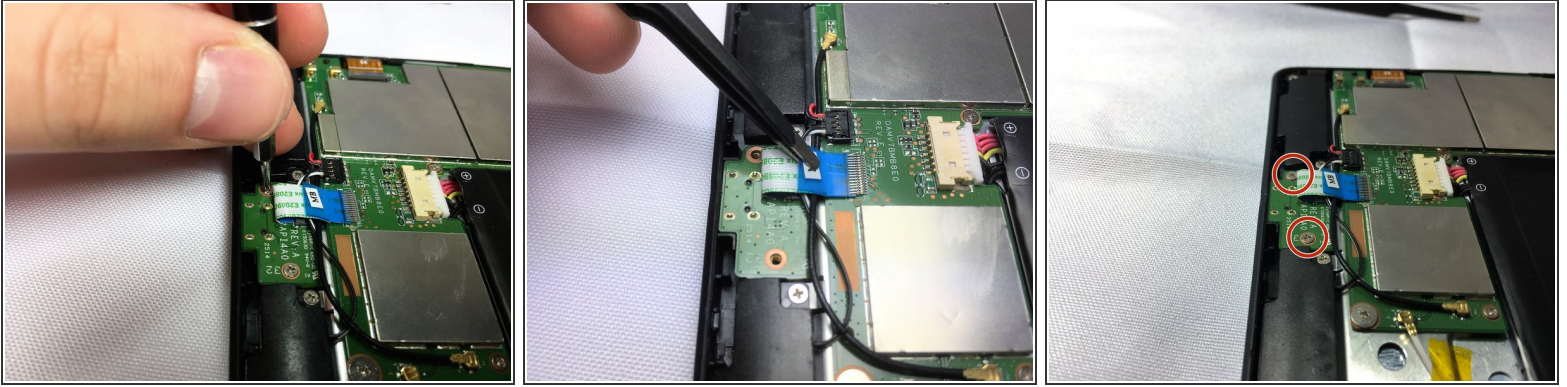

- Remove the charging (micro-USB) port by unscrewing the indicated screws using the Phillips #00 screwdriver.
- Disconnect the ribbon cable connecting the charging port board to the motherboard using tweezers.
- Use the tweezers to grab the sides of black, plastic connector. Do not grab from the wires or try to wedge it out from the bottom.

 Be extremely careful when disconnecting the ribbon cable. It is very delicate.

To reassemble your device, follow these instructions in reverse order.