



Samsung Galaxy Tab S2 9.7 Verizon Tablet

Base Case Replacement

Use this guide to properly open up the tablet for common problems.

Written By: Divya Prabakaran




INTRODUCTION

Need to replace a broken part in your tablet? Follow this guide to open up your tablet to get to any part you need.

TOOLS:

- [iOpener](#) (1)
 - [Metal Spudger Set](#) (1)
 - [Suction Handle](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-


Step 1 — Back Case

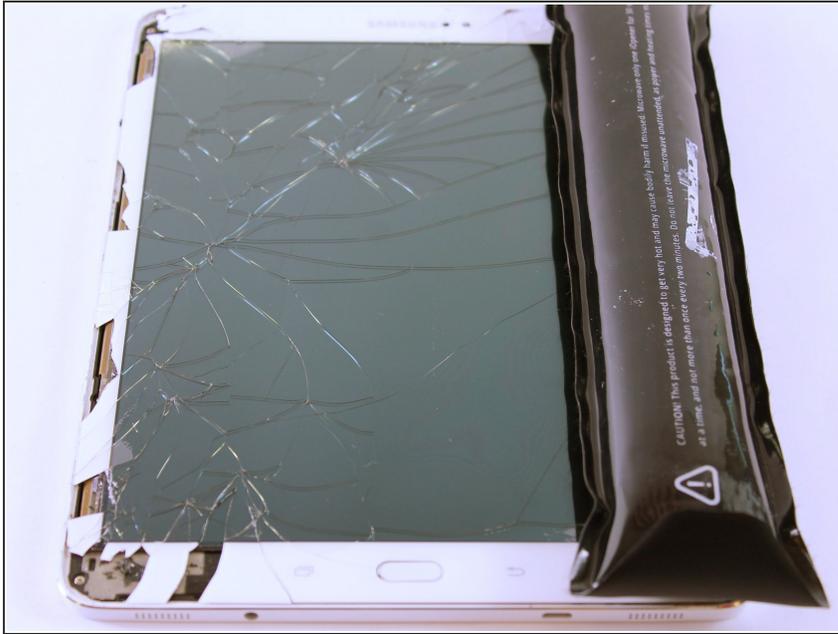

⚠ Turn off the tablet before disassembly.

- Heat up an iOpener for 30 seconds and place on all four seams of the screen. A heat gun can be used as well.


Step 2

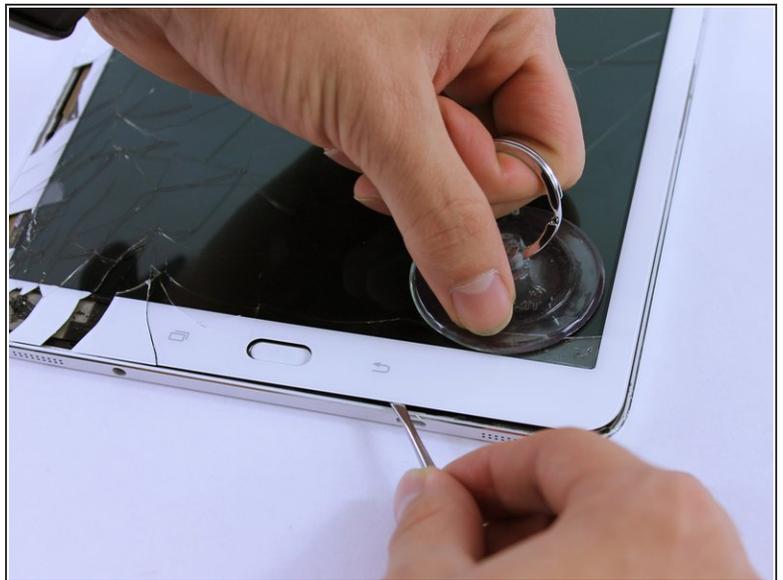

- The glue is now melted, so using the metal spudger shown, pry open all sides of the tablet.
- When prying open near the home and touch screen buttons, use a suction cup.

⚠ Do not stick the metal spudger past these buttons as this may damage your device.


Step 3

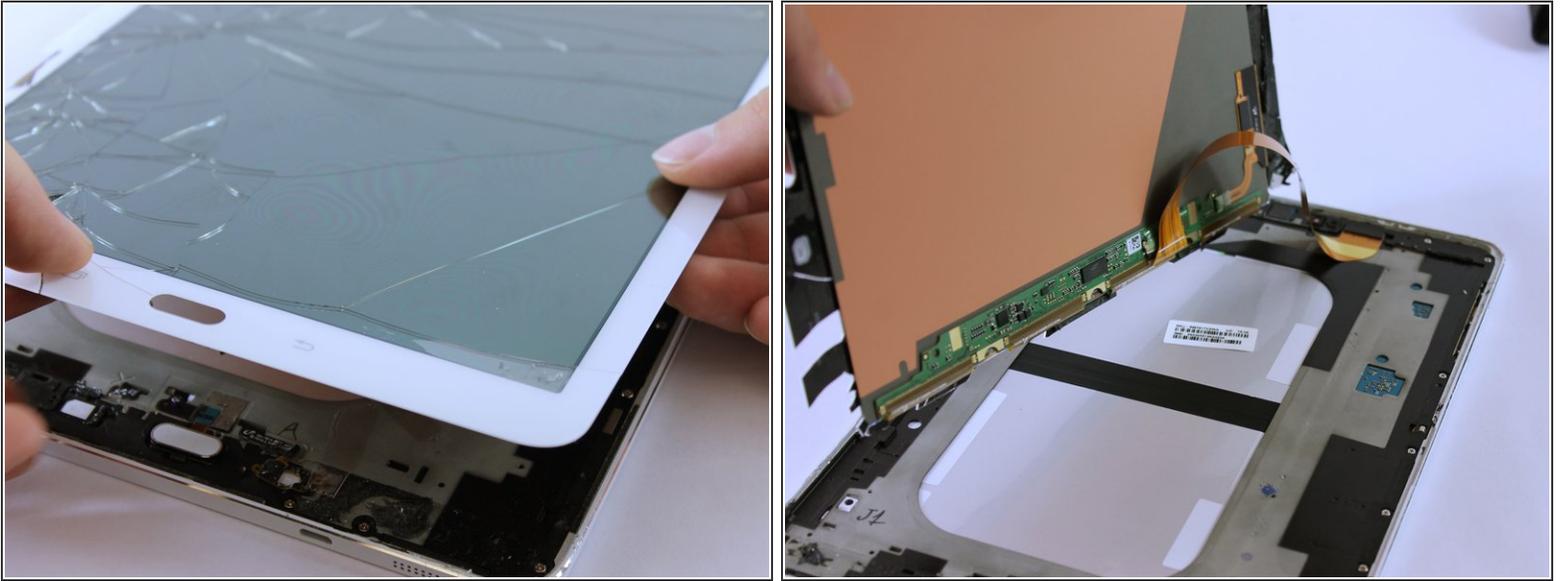

- Carefully lift up the screen.

⚠ There is a ribbon cable attached. Lifting the screen too quickly can damage the cable.


Step 4

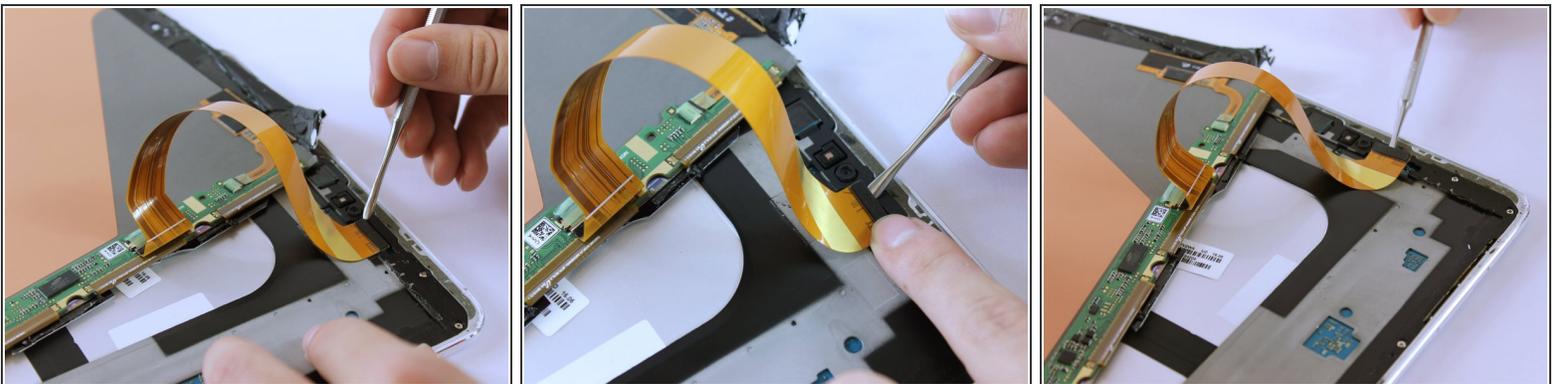

- Remove the ribbon cable using the Metal Spudger.


ⓘ The ribbon may be taped underneath to the grey frame. Gently lift the ribbon to untape it.

Step 5

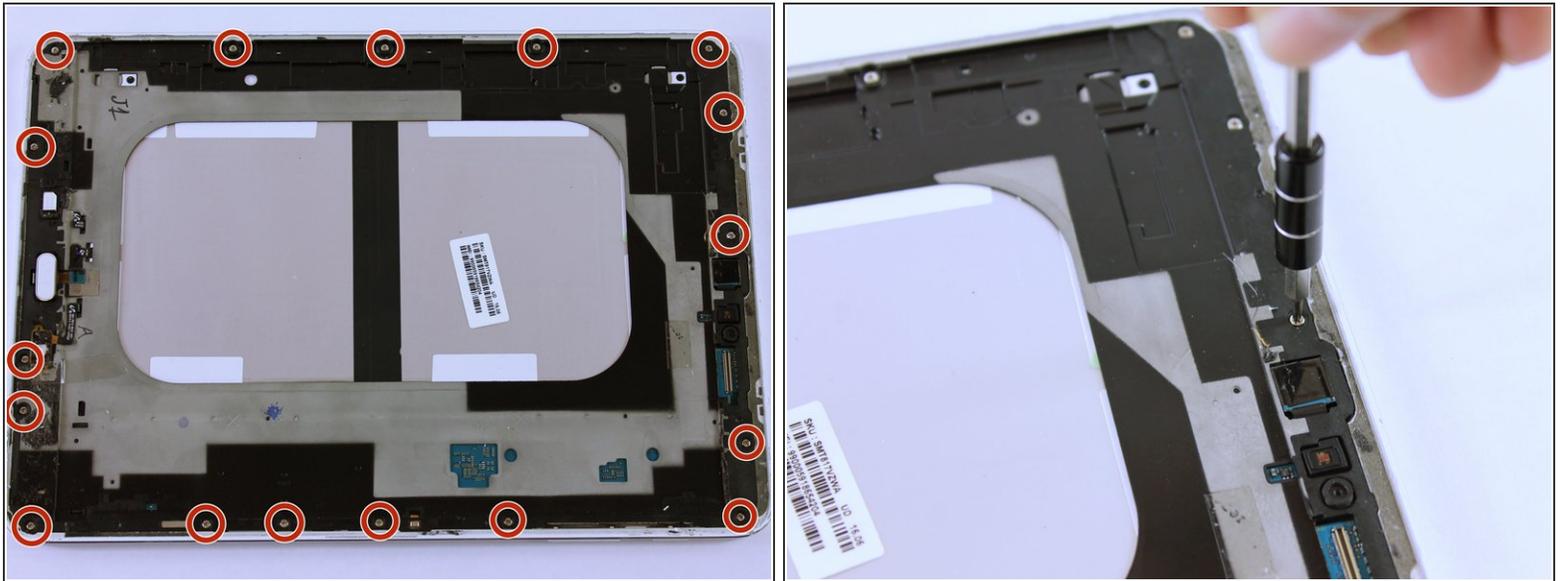


- Remove all seventeen 3 mm screws using a PH000 Phillips screwdriver.

Step 6

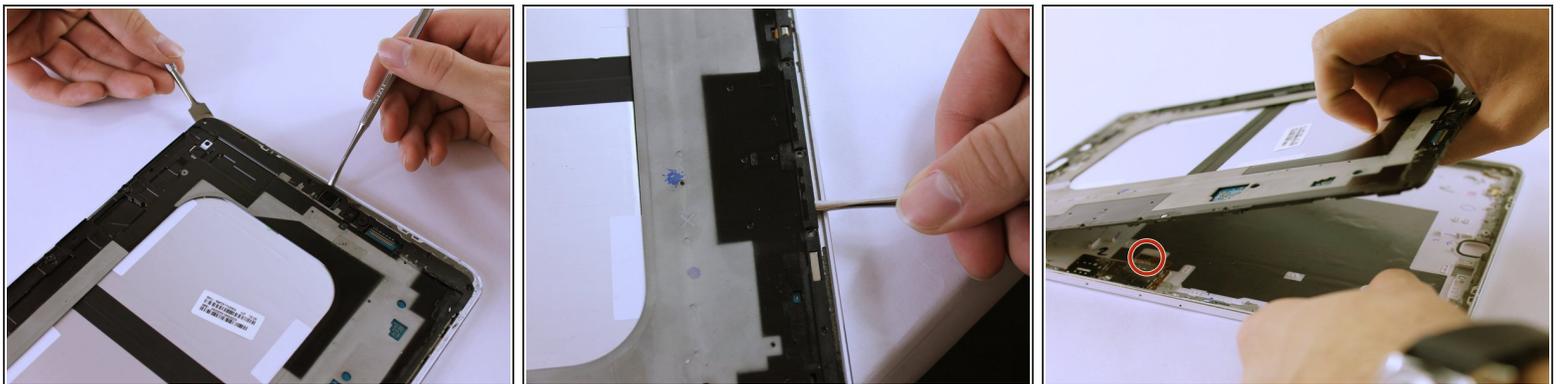

- Lift the black frame using the two Metal Spudgers shown.
- ⓘ On the third picture, there is a Sim Card component that is connected to the frame and back cover. As you lift up the frame, it'll detach. This is normal.

Step 7

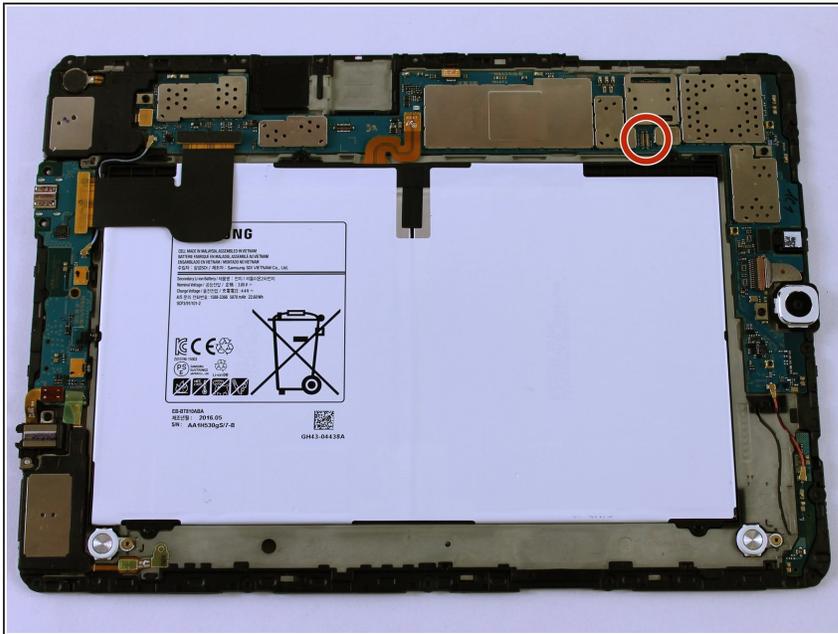

- Once lifted, flip the grey frame over.
- This component connects to the sim card.
- ★ Remember to click this component back into place when reassembling the tablet.

To reassemble your device, follow these instructions in reverse order.