




# MacBook Air Models A1237 and A1304 Hard Drive Replacement

Written By: Walter Galan

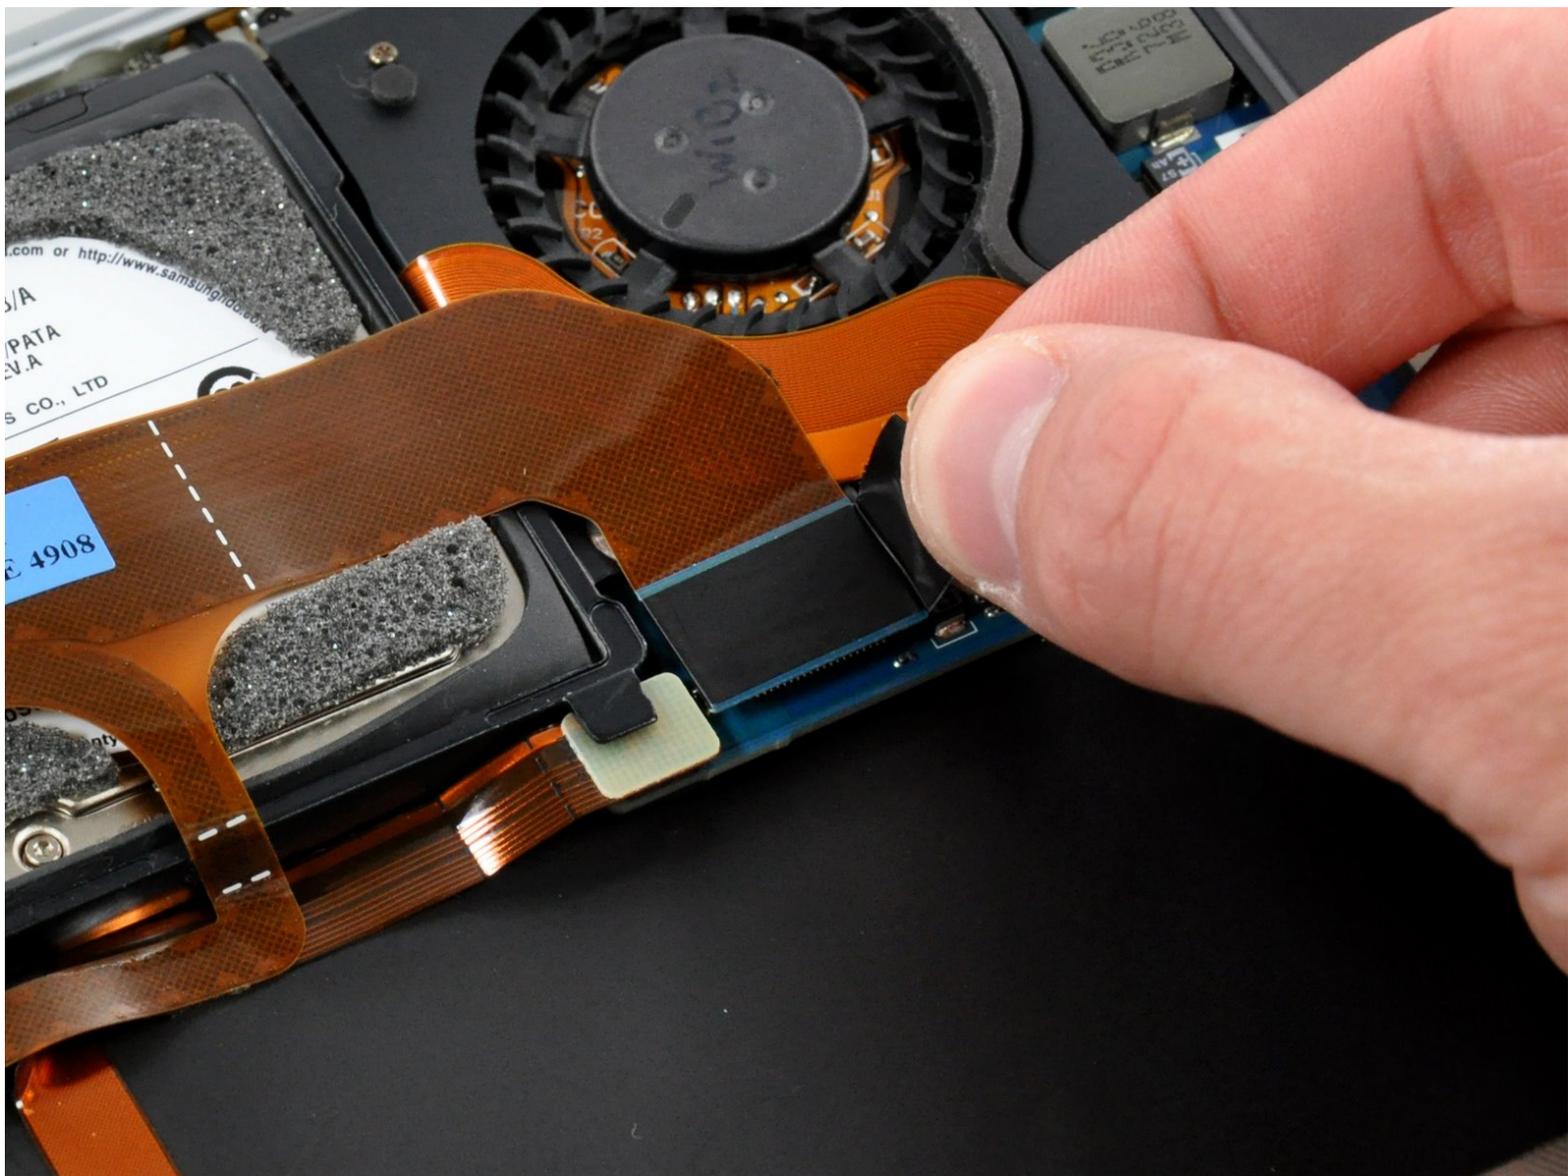

---

 **TOOLS:**


- Phillips #00 Screwdriver (1)
  - Spudger (1)
-

## Step 1 — Hard Drive




- Disconnect the port hatch ribbon cable from the logic board by pulling it straight up by its black pull tab.
- Pull the audio out ribbon cable off the adhesive securing it to the upper case.
- Use a spudger to pry the audio out ribbon cable connector board off the hard drive bracket.

## Step 2

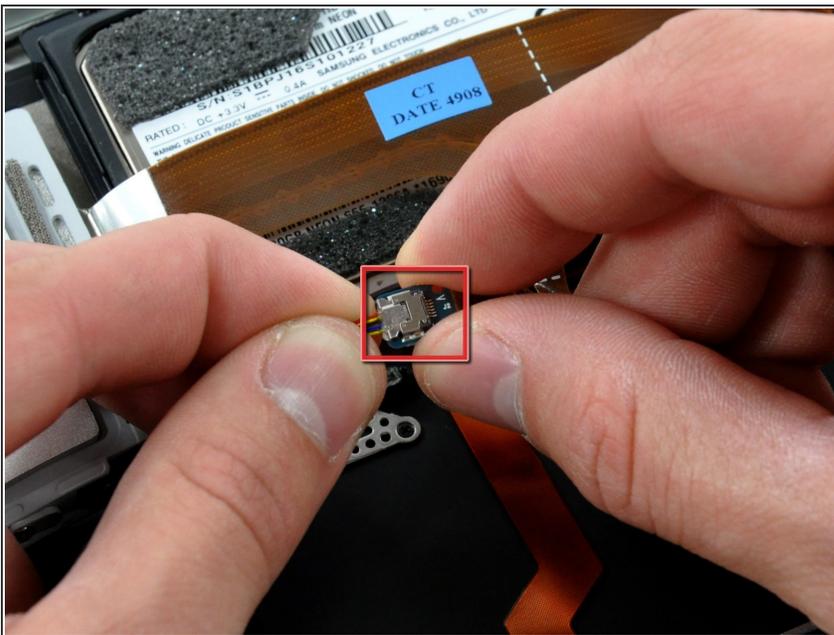

- Disconnect the audio out cable from its socket on the port hatch ribbon cable.

### Step 3

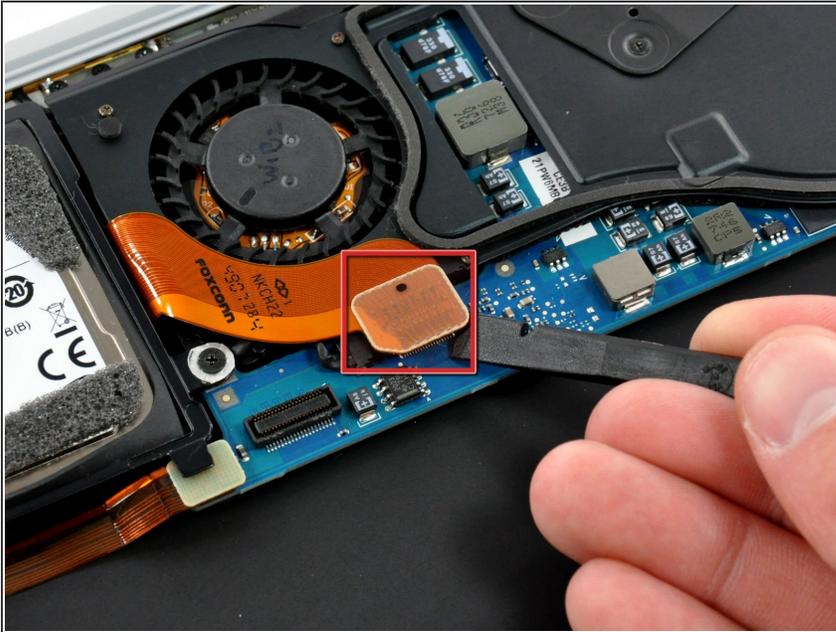

- Use a spudger to pry the hard drive cable connector up off the logic board.

### Step 4



- Use the sharp end of a spudger to de-route the microphone cable from the hard drive bracket.
- Remove the cosmetic screw cover from the adhesive securing it to the hard drive bracket.

## Step 5



- Remove the four Phillips screws securing the hard drive assembly to the upper case:
  - Two 4.7 mm screws.
  - Two 3.9 mm screws.

## Step 6



- Lift the hard drive assembly out of the upper case.

To reassemble your device, follow these instructions in reverse order.