



Mr. Coffee DRX5 Digital Display Replacement

This guide will show you how to replace the display on your Mr. Coffee DRX5.

Written By: James Patterson



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Digital Display





- Use a Phillips #1 screwdriver to remove the two 9mm screws and the three 11mm screws on the bottom of the coffee maker and remove the bottom plastic cover.

Step 2

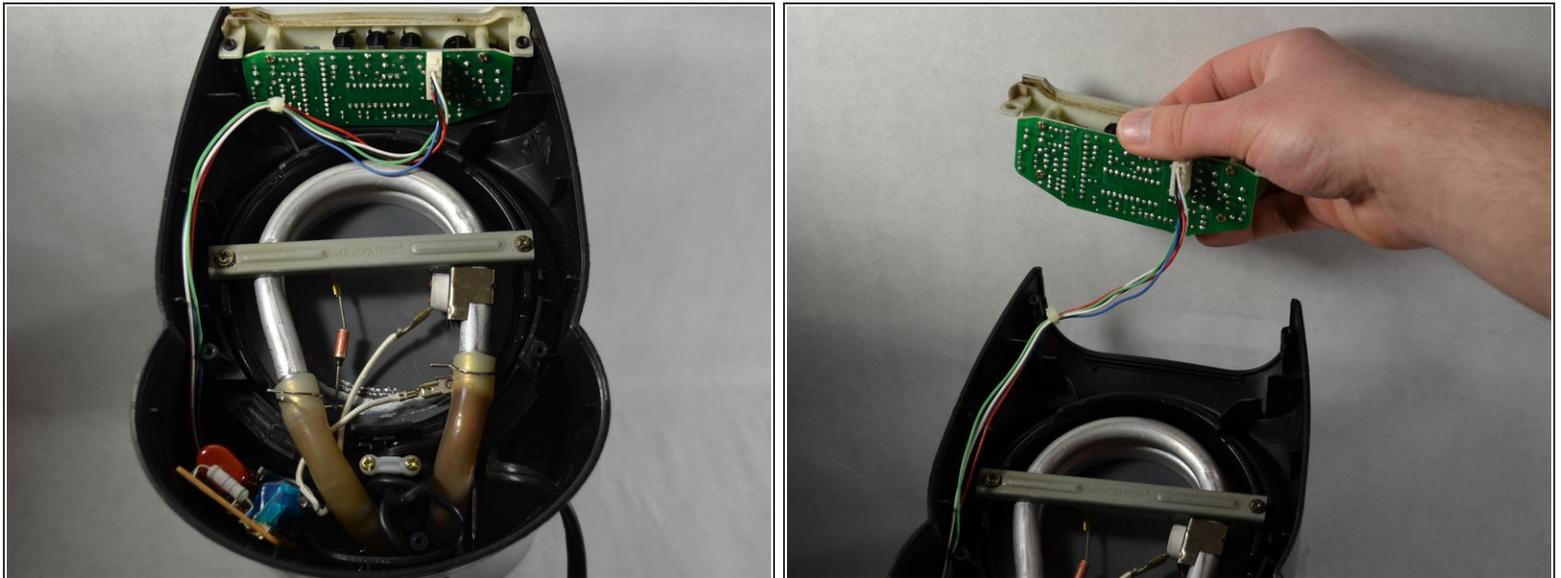

- Slide display out of base housing.

Step 3

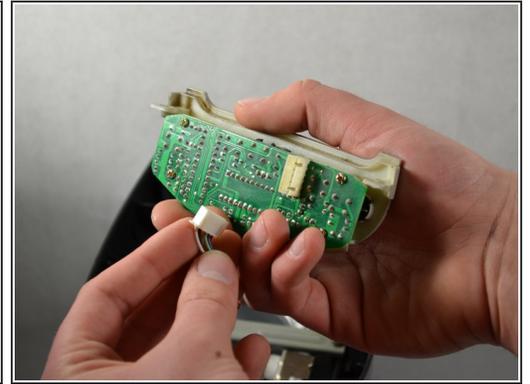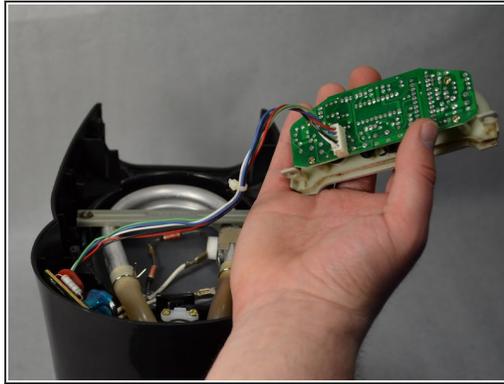

- Unplug display from back

To reassemble your device, follow these instructions in reverse order.