



Acer Aspire One 751h-1948 RAM Card Replacement

Use this guide to replace the RAM in the Acer Aspire One 751h-1948

Written By: Francisco Monteiro Junior



INTRODUCTION


Use this guide to replace the RAM in the Acer Aspire One 751h-1948



TOOLS:


- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

Step 1 — RAM Card

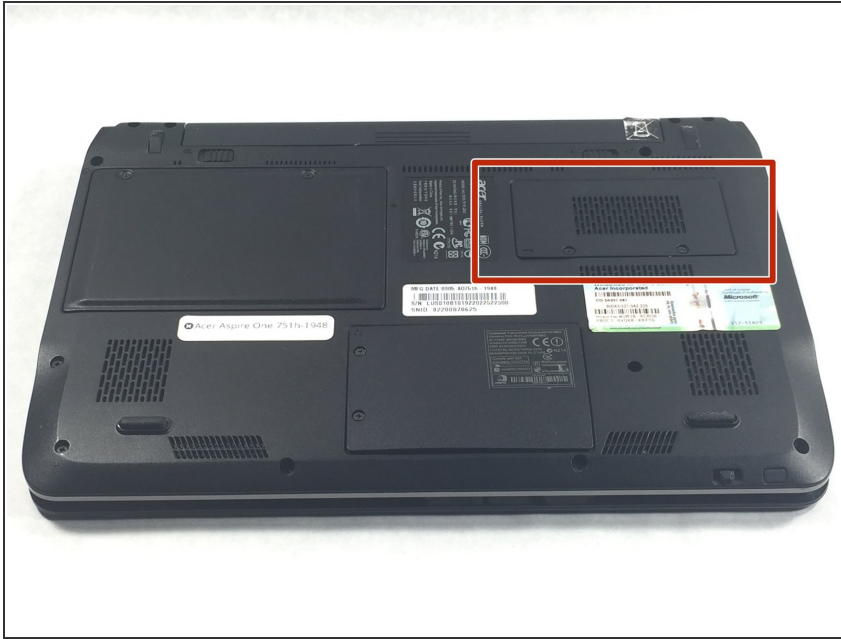


- Below the battery to the right corner of the laptop the RAM card will be located there.

Step 2

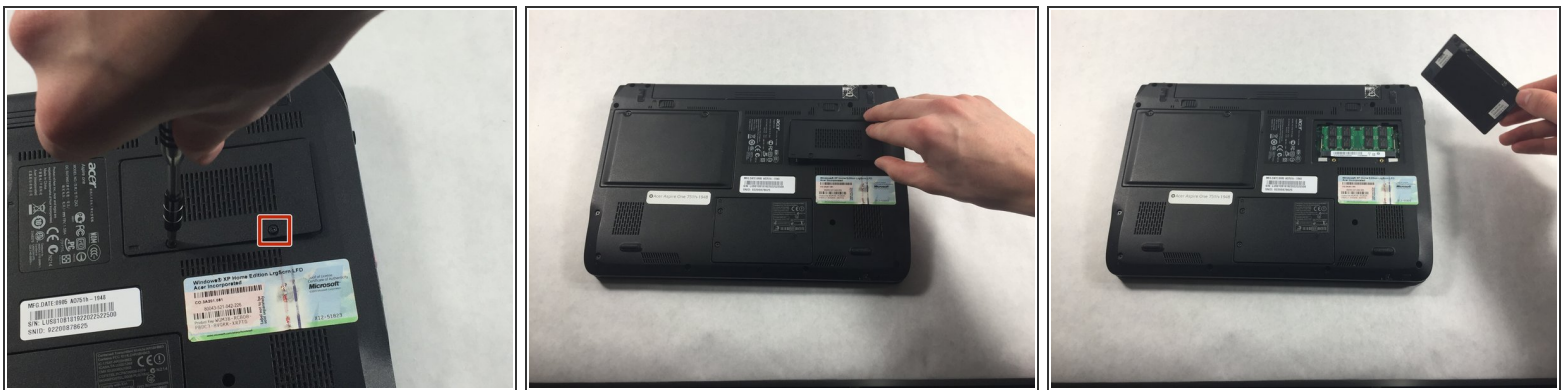

- There are two Phillips #0 (M2-L2.5 mm) screws that is securing the cover. Remove these screws and lift up the cover panel.

Step 3

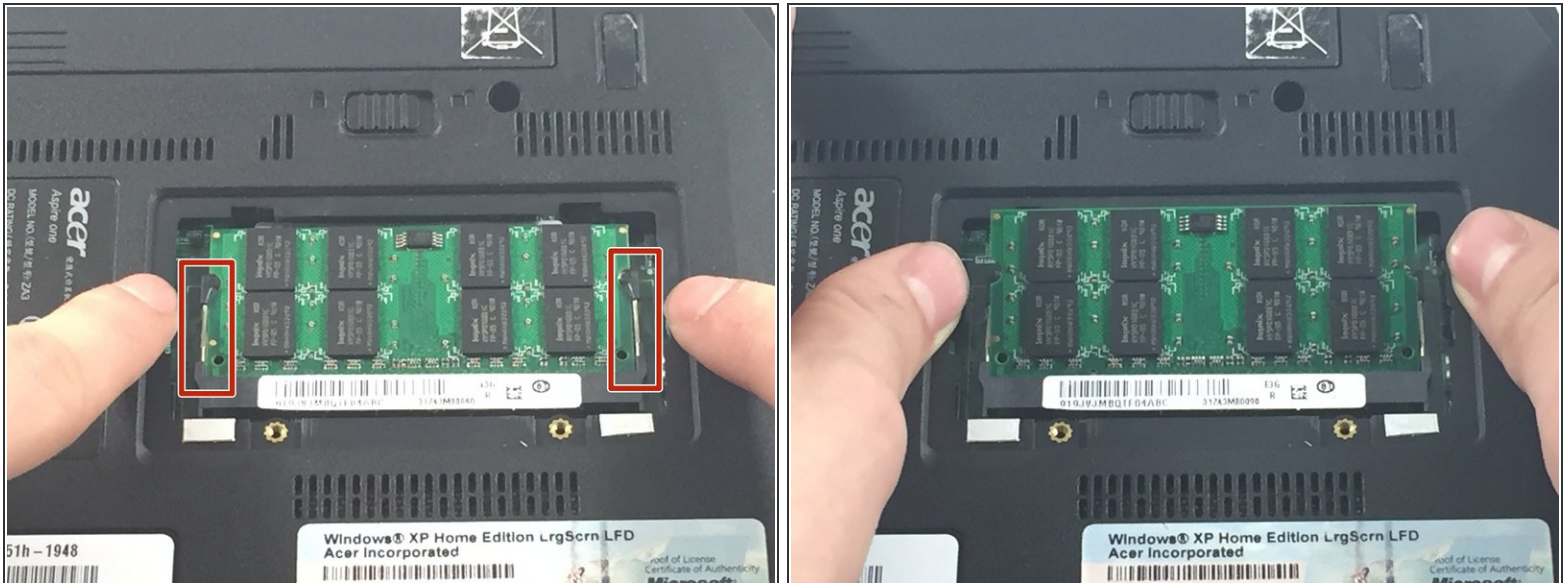

- Use your thumbs to push the RAM clips out. The card should lift up when its released. It can then be removed.

To reassemble your device, follow these instructions in reverse order.