




# Monster DNA Wire Replacement

One or both of the speakers on the Monster DNA headphones is not working. The problem could be the wiring on the speaker part.

Written By: Kevin Costello

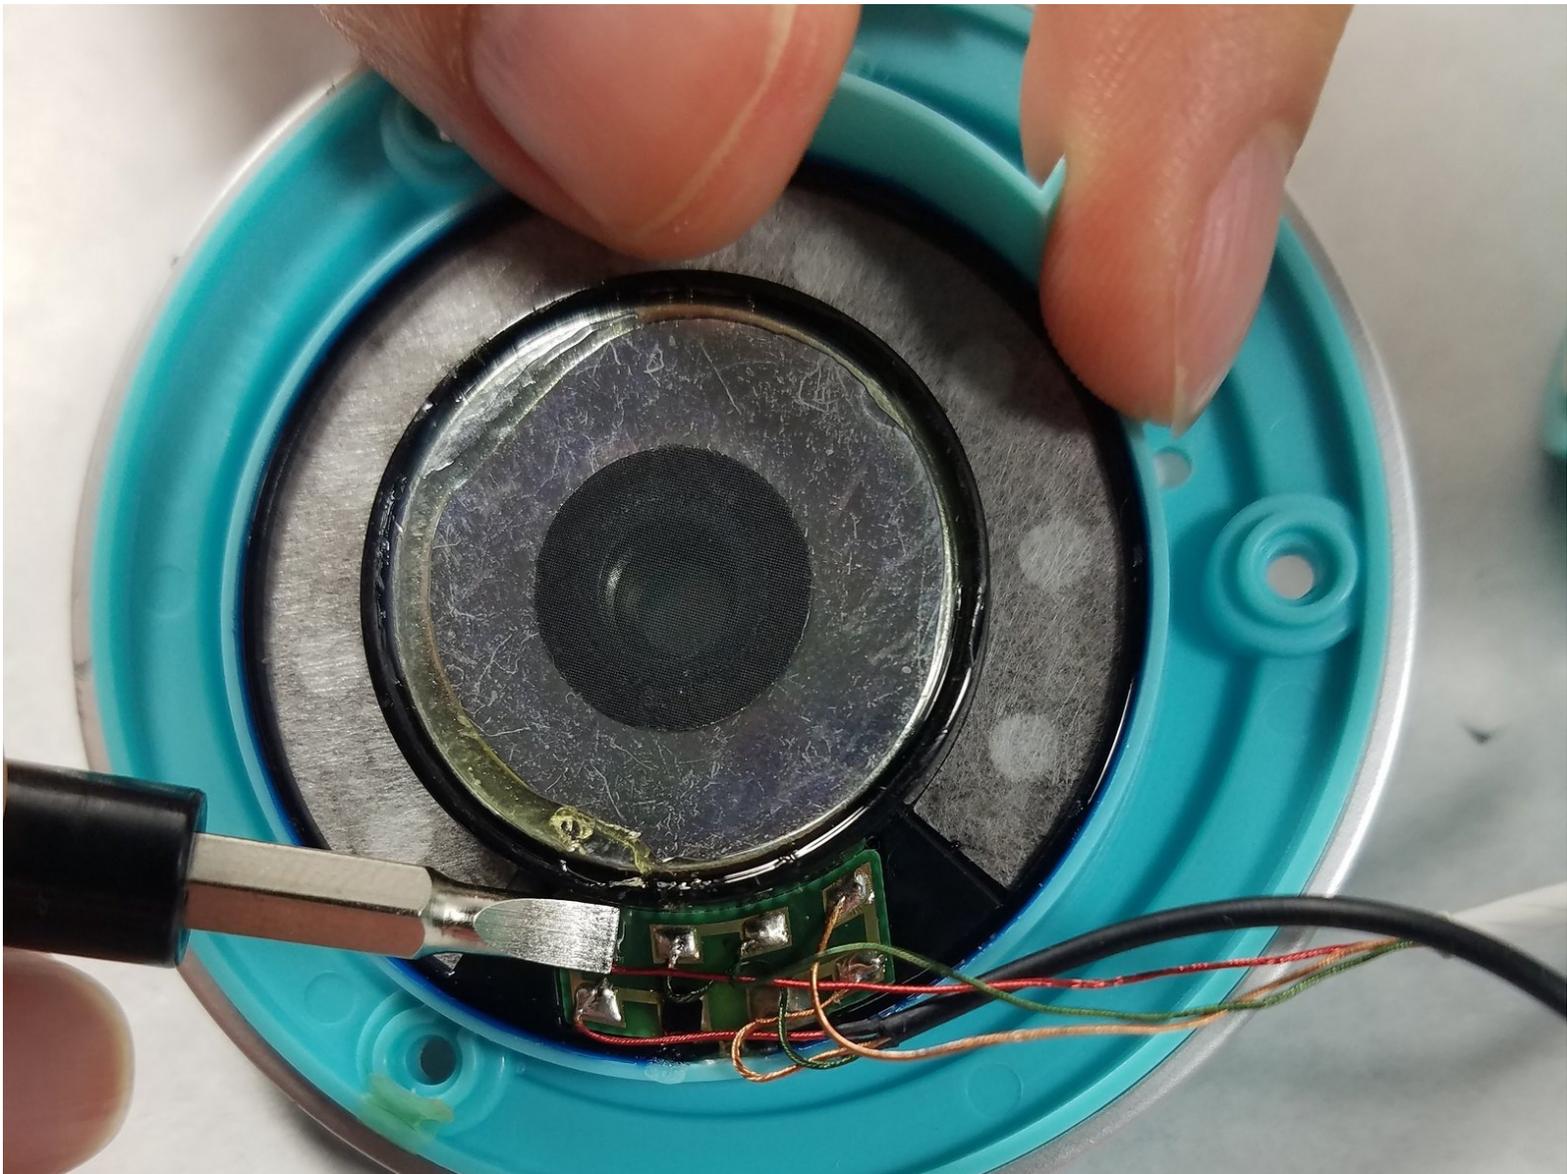

---

## INTRODUCTION

If your Monster DNA headphones are playing noise out of only one side then it is likely that there is a loose wire and this will need to be soldered. This happens frequently because small tensions on the wire can loosen the solder joints easily. To do so, you must disassemble the earpiece and reattach the wires.

---

### TOOLS:


- [Soldering Iron](#) (1)
  - [Solder](#) (1)
  - [Metal Spudger](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Wire




- Take off the ear cushions by pulling on the sides.

## Step 2

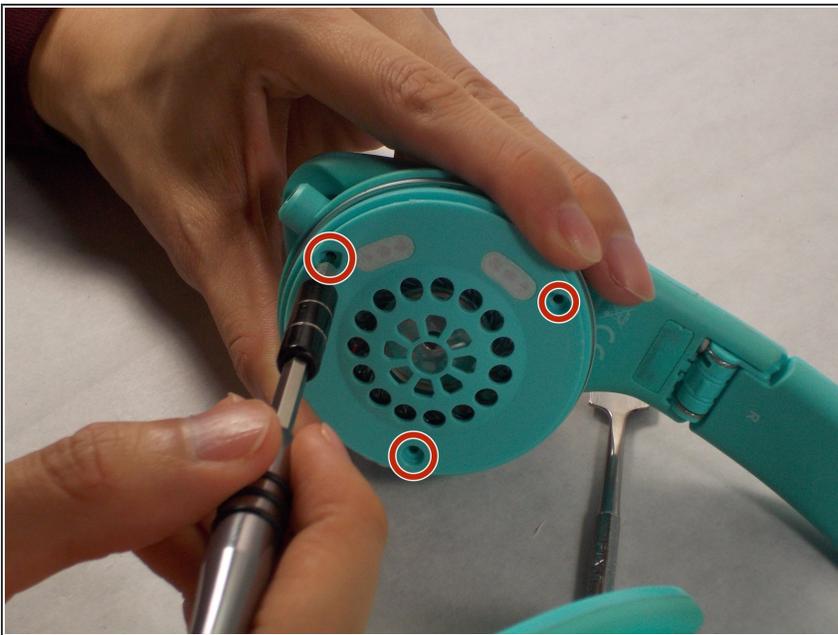


- Use a Phillips #2 screwdriver to unscrew the three 5mm screws that secure the speaker cover.

### Step 3

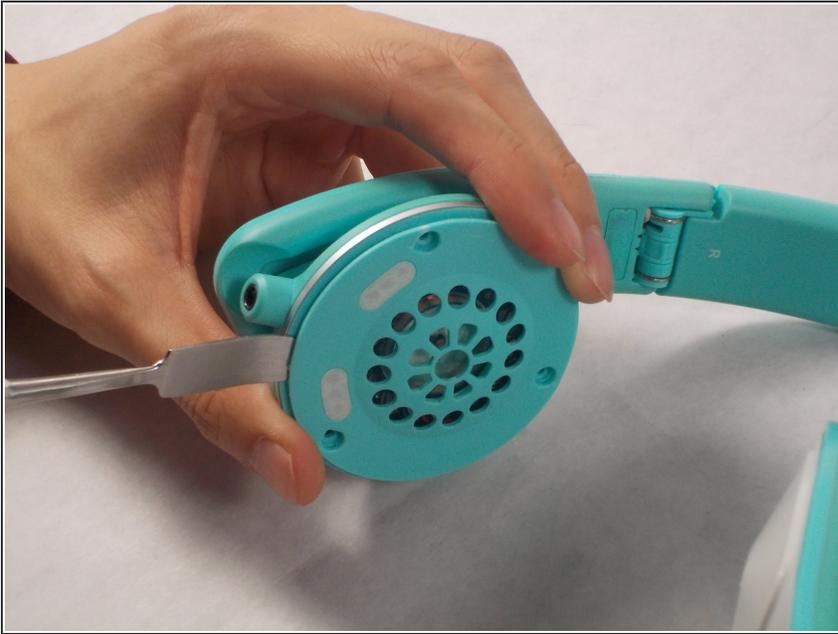

- Use a plastic opening tool or a metal spudger to pry off the plate
- ⚠ Be careful as too much force may cause damage to your headphones.

### Step 4

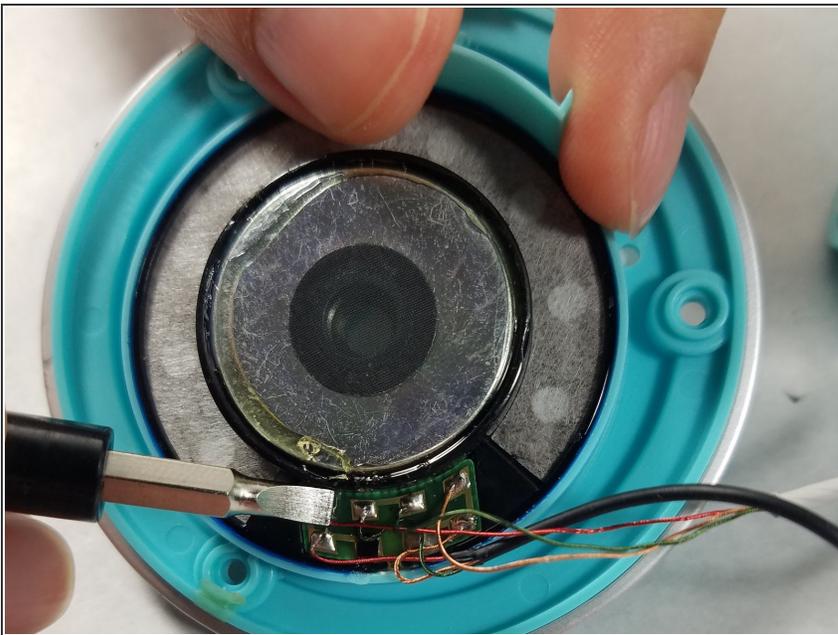

- Once the loose wire or wires are located on the back of the speaker, use a soldering iron to attach the loose wire back onto the speaker.

To reassemble your device, follow these instructions in reverse order.