



Lenovo Yoga 710-14IKB RAM Replacement

Written By: Grant Doerksen




TOOLS:


T4 Torx Screwdriver (1)
iFixit Opening Tool (1)


PARTS:

01AG843 - Lenovo Laptop Memory - Genuine (1)

Step 1 — Back Cover

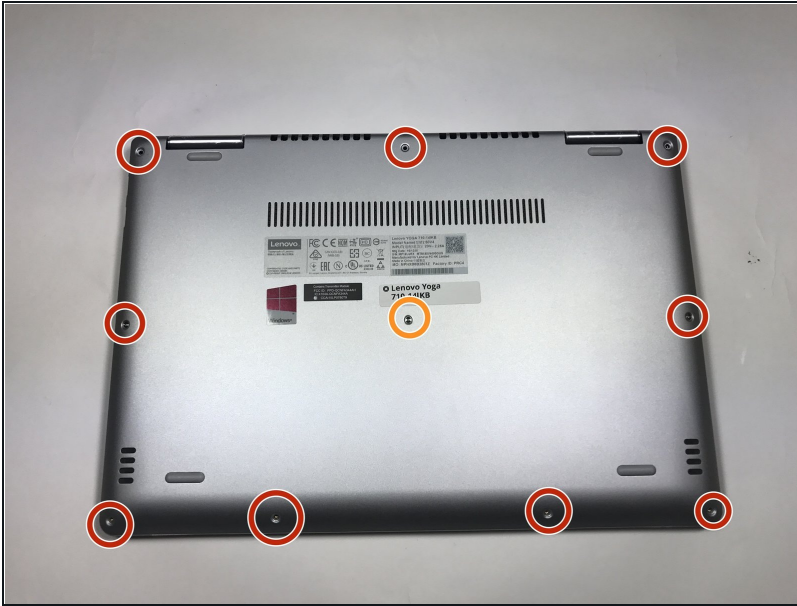

 Ensure your device is completely OFF before starting this guide.


- Use a Torx T4 screwdriver to unscrew the nine 5 mm screws holding the cover in place.
- Use a Torx T4 screwdriver to unscrew the 8 mm screw in the center.
-  When, reassembling, make sure not to tighten the screws too much or you may risk cracking the plastic cover.

Step 2




- Use the plastic opening tool to pry the cover up and away from the laptop, starting at one end and working your way around the cover.
- ① The cover is large and flat and made of thin plastic. It cracks easily, so make sure not to pry too hard.

Step 3 — RAM

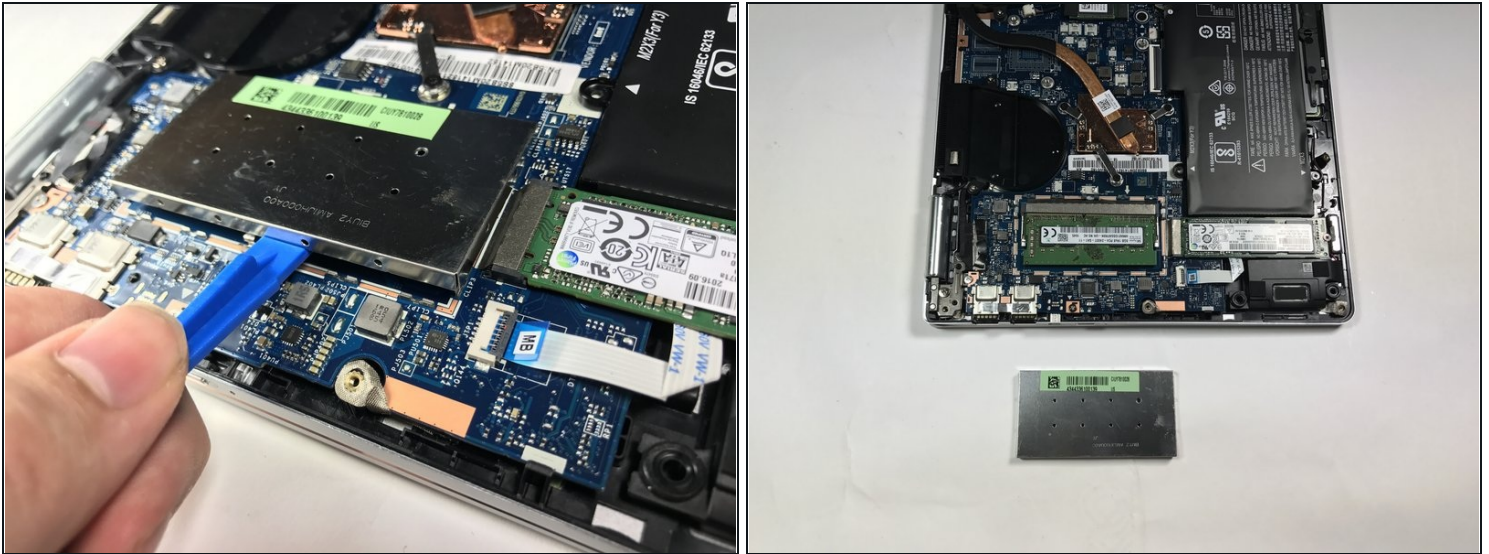


- Use blue plastic opening tool to pry the ram cover loose. Carefully lift up the ram cover and remove it from the laptop.

Step 4

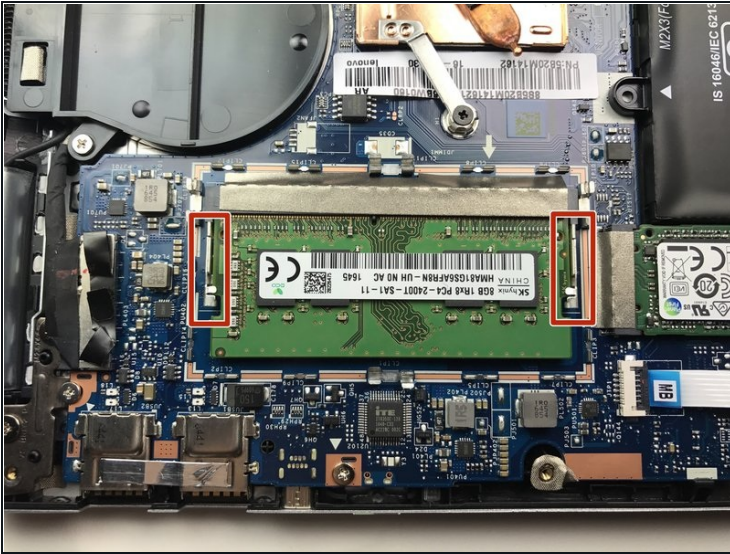

- Locate the ram hold downs.
- Push outwards on the hold downs to release the RAM.

Step 5

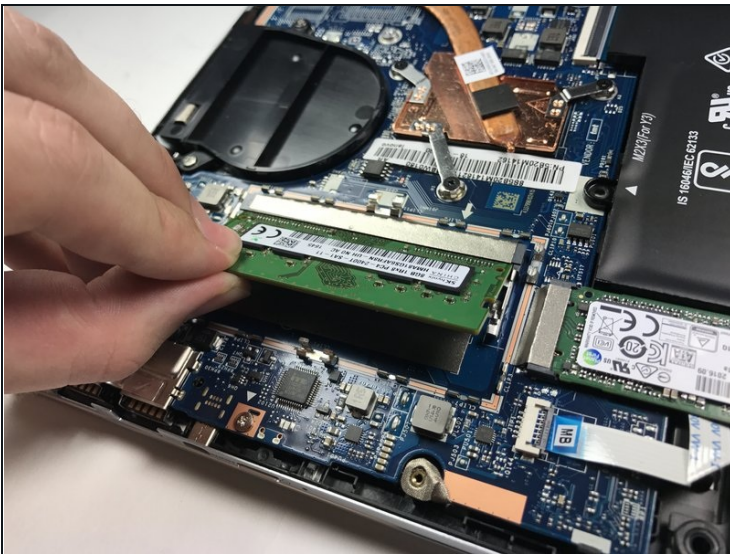

- Remove the RAM by pulling away from the RAM socket.

To reassemble your device, follow these instructions in reverse order.