




Astro A50 2016 Headset Battery Replacement

How to remove the Astro A50 2016 battery from the headset.

Written By: Andrew Monson

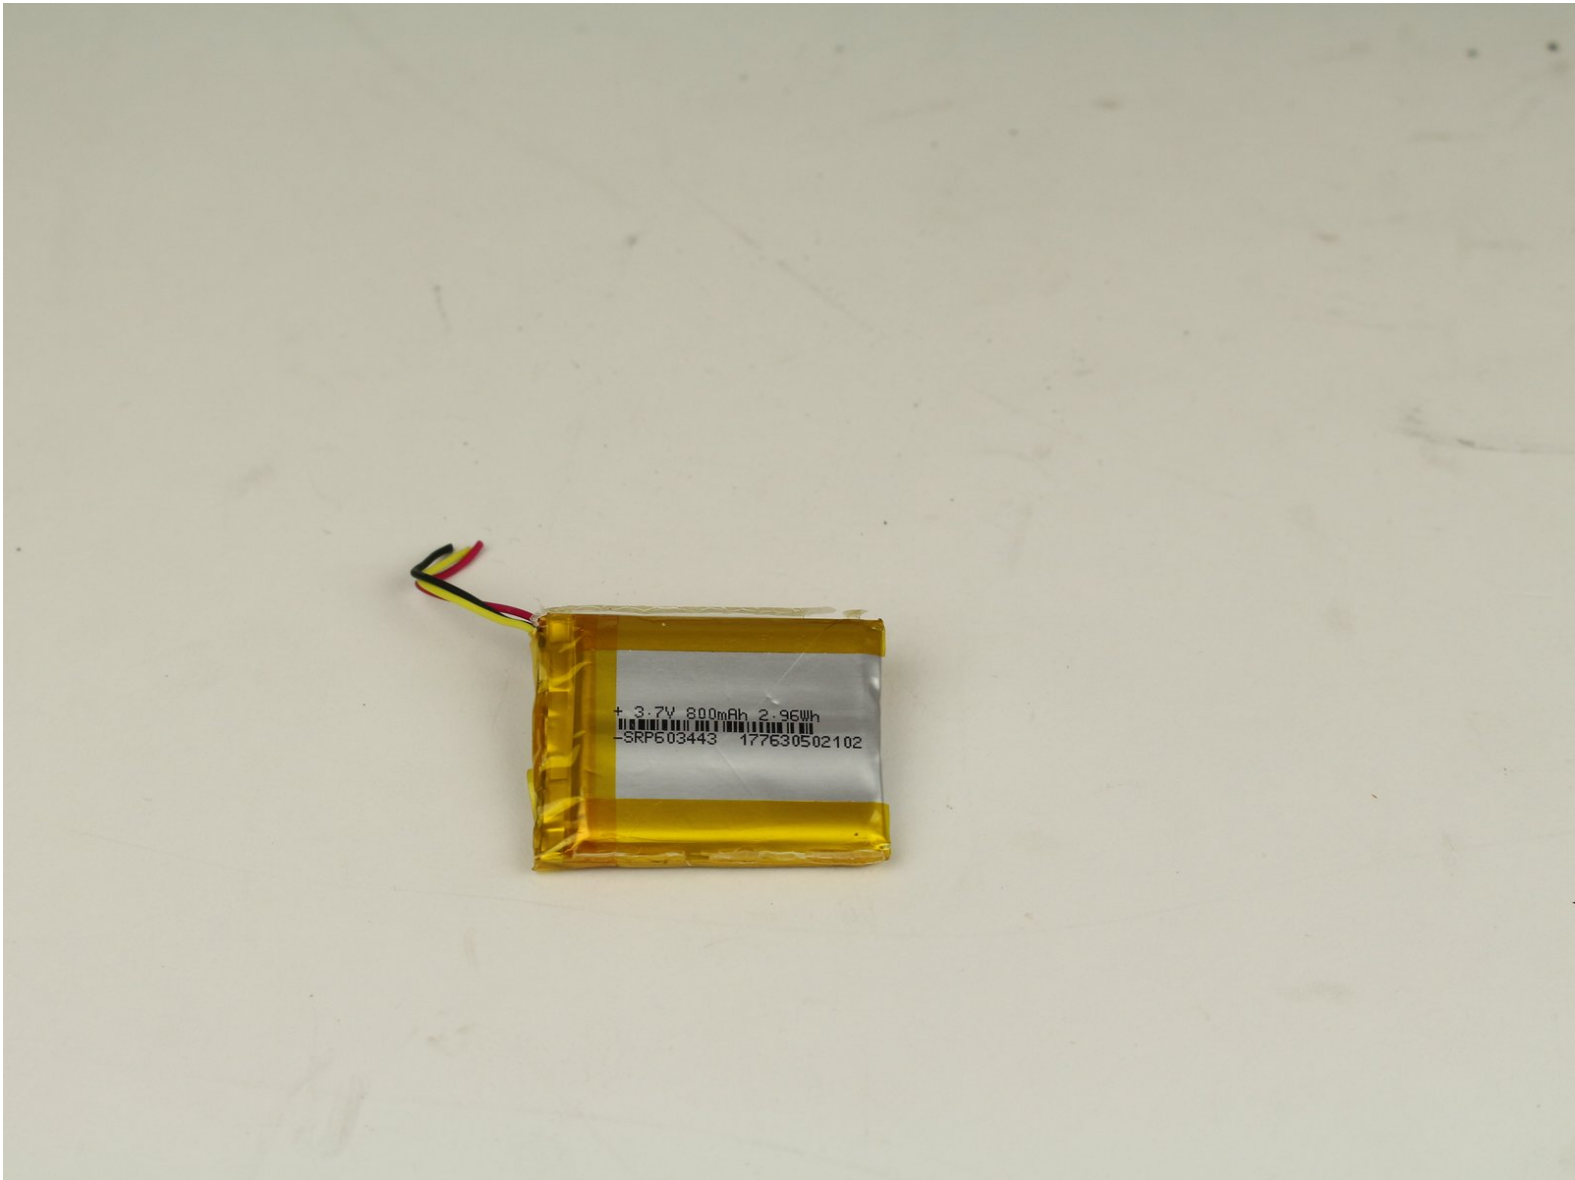

INTRODUCTION

The battery is what gives the headset the power to run and function. This guide will show you how to remove the battery from the headset.



TOOLS:

- [iFixit Opening Tool](#) (1)
- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Astro A50 Replacement Battery](#) (1)

Step 1 — Headset Speakers



- Remove the magnetic ear pads by gently pulling up away from the head set.

Step 2



- Squeeze the plastic opening tool between the black plastic and foam pad on non mic side and then pry upwards to remove the felt pads covering the speaker.

Step 3





- Remove the four 6mm Phillips 1 screws.

Step 4




- Lift the speaker module up off the device.

Step 5 — Headset Battery

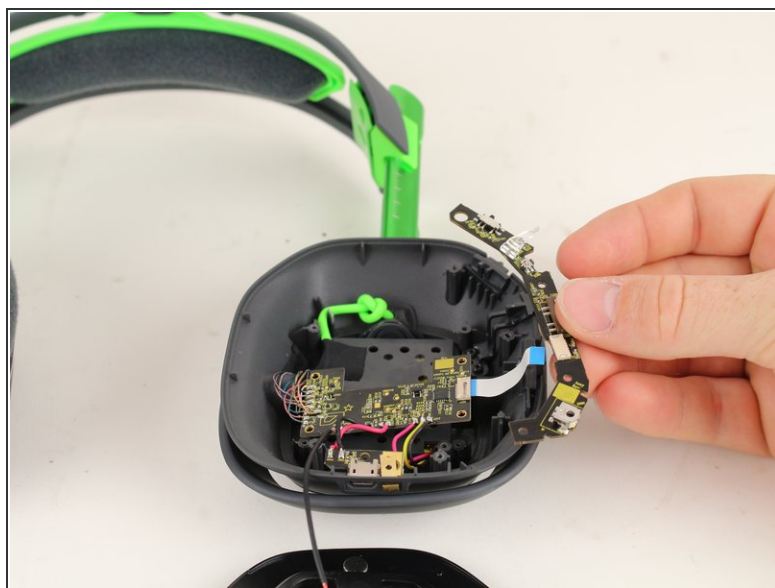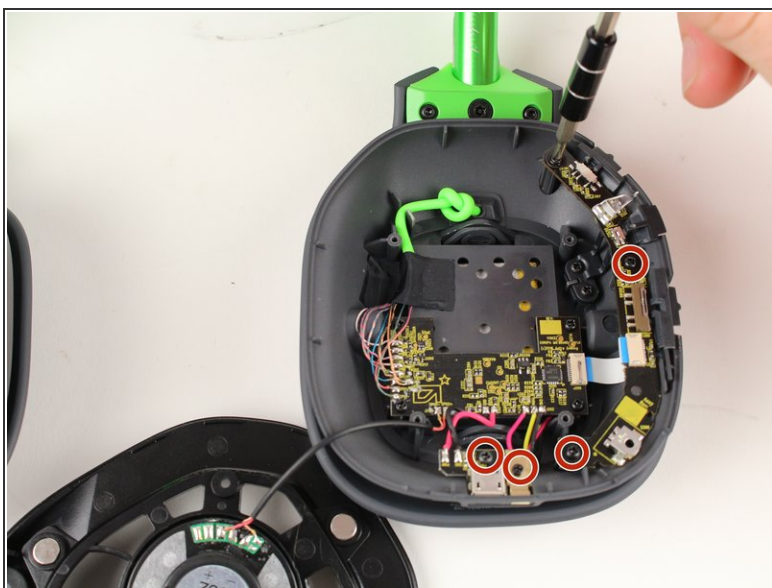

- Remove the five 6mm PH1 screws.
- Remove the buttons panel by pulling the panel away from the white ribbon cord.

Step 6

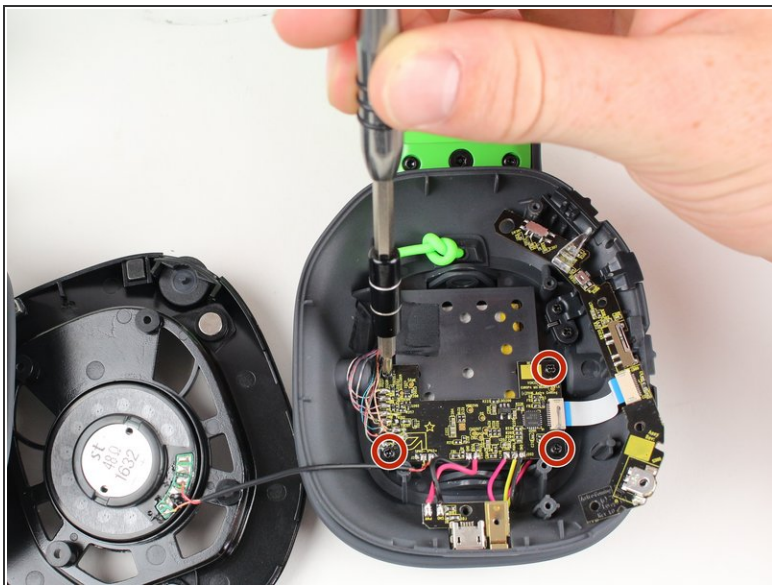

- Remove the four 6mm PH1 screws.
- Remove the tape holding the wires connected to the motherboard.

Step 7



- Remove the back panel by squeezing the two tabs together and pushing out.

Step 8



- Disconnect the battery wires by desoldering them.
- [How To Solder and Desolder Connections](#)

Step 9



- Remove the battery by using the plastic opening tool to pry it away from the headset.

To reassemble your device, follow these instructions in reverse order.