

HyperJuice Magic Box User Guide

Magic Box User Guide

Written By: Walter Galan



INTRODUCTION

The Magic Box modifies your existing Apple MagSafe Power Adapter for use with the HyperMac/HyperJuice External MacBook Batteries.

Key benefits:

- It takes only two minutes to attach two "Magic Box" adapters to MagSafe Power Adapter cord.
- Create your own MagSafe charging cable to charge any MacBook with the HyperMac External Battery or Car Charger.
- Recharge HyperMac with Apple MagSafe Power Adapter. No need to carry separate HyperMac power adapters.
- Use as normal MagSafe Power Adapter to charge MacBooks.

TOOLS:

- Pen (1)
- iFixit 6 Inch Metal Ruler (1)
- Flush Cutter (1)

PARTS:

HyperJuice Magic Box - MagSafe
Modification Kit (1)

Step 1 — Disclaimer




IMPORTANT: PLEASE READ THIS FIRST

- This is a modification kit that irreversibly modifies your Apple MacBook Power Adapter. Usage of this kit will void the warranty of your Apple MacBook Power Adapter from Apple Inc. While every effort is made to ensure safe usage of this product (including short-circuit and over current protection), this is still a DIY (Do-It-Yourself) kit.
- Sanho shall not be liable for any special, incidental or consequential damages, including, but not limited to, lost revenues, lost profits, loss of use of software, loss or recovery of data, rental or replacement equipment, downtime, damage to property, and third- party claims, arising out of any theory of recovery, including warranty, contract, statutory or tort.
- Notwithstanding the term of any limited warranty or any warranty implied by law, or in the event that any limited warranty fails of its essential purpose, in no event will Sanho's entire liability exceed the purchase price of this product. Please refer to our website for all terms and conditions.


 By using this product, you indicate that you accept these terms and conditions. Otherwise please return this product in its original packaging to the seller.

Step 2 — Materials

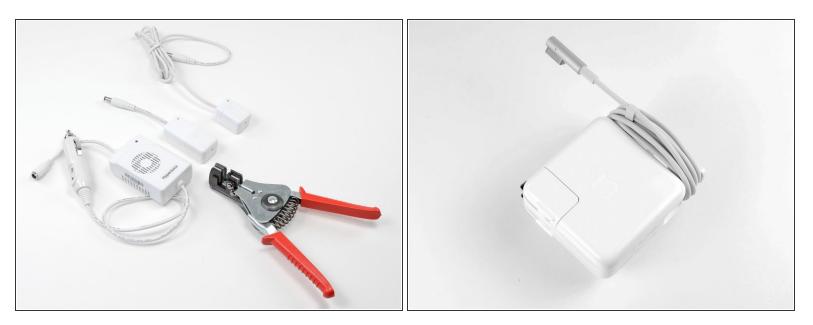

- Before beginning, lay out the contents of the Magic Box kit. They should include (clockwise from the left):
 - Car Adapter
 - Large Magic Box
 - Small Magic Box
 - Wire Strippers
- Also locate the MagSafe charger you wish to modify.

Step 3 — Modifying Power Adapter

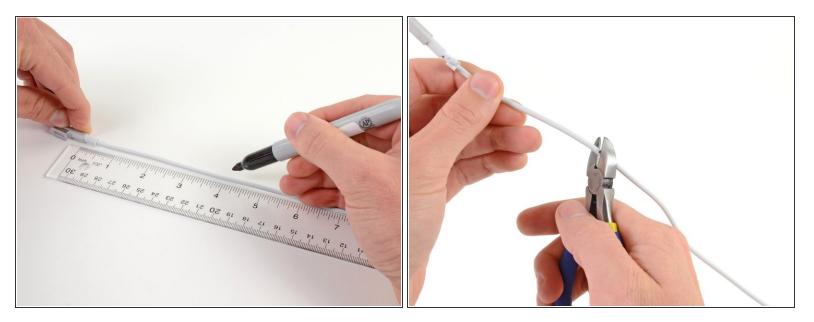

Make sure that the power adapter is disconnected from the wall outlet and MacBook.

- Use a pen to make a mark on the MagSafe cable about 4" (10 cm) from the MagSafe connector.
- Use a pair of wire cutters or scissors to cut the cable at the mark you made about 4 inches from the MagSafe connector. Set aside the MagSafe connector wire for later.
- (i) Although the wires inside the cable are copper, they may damage some scissors. We recommend using wire cutters if possible.



 Use a pen to make a mark about .75" (2 cm) from the cut end on the side of the cable attached to the power adapter.


Step 5



Before using the included wire strippers, we recommend cleaning the upper and lower flat areas where the tool grips the cable with degreaser. The manufacturing process leaves a small amount of grease on these areas that may stain the white cable you are about to strip.



- (i) There are four stripping holes of varying sizes on the wire stripper.
- Carefully position the cable in the largest (innermost) hole on the wire stripper and line up the edge of the jaws with the mark you just made as seen in the first picture.
- Squeeze the wire stripper to remove the outer cord tubing, revealing wire strands beneath.
- (i) If necessary, slide the outer sheath off the end of the cable.

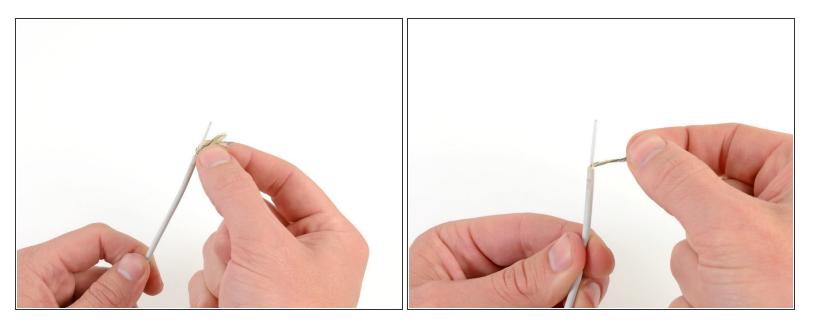


- Gently move the fine wire strands aside to reveal an inner wire.
- Twist the loose outer wire strands together into a single twisted strand.
- (i) If you are handy with a soldering iron, tinning the ground lead after you twist it together will help keep it in one piece.

Step 8




 Use a pen to make a mark about 3/8" (1 cm) away from the end of the inner wire.

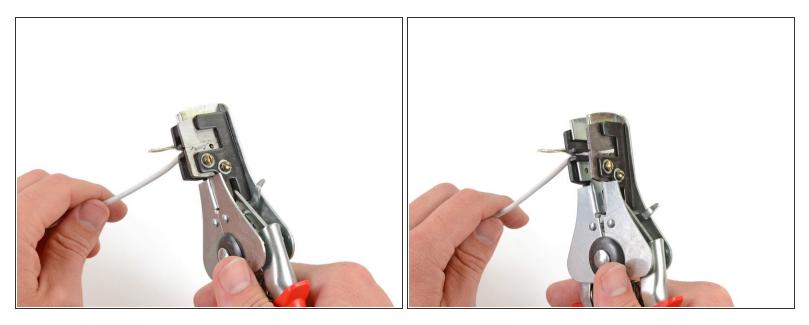


- Using the wire stripper again, align the edge of its jaws with the second smallest hole on the pen mark made in the previous step.
- Squeeze the wire stripper to strip off the insulation on the inner wire.

Step 10

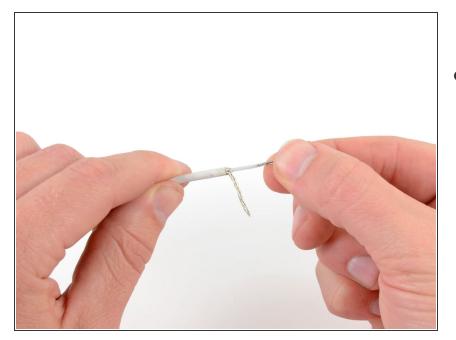


 As before, twist the center wire strands tightly into a single twisted strand.

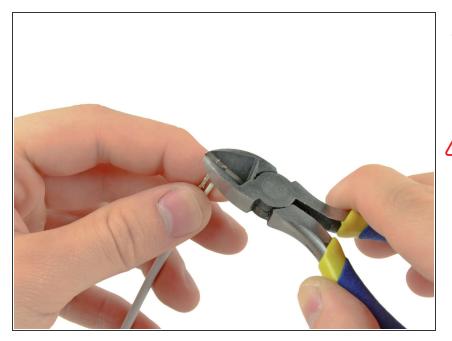


- Line up the outer and inner twisted strands side by side and trim the ends of both wires to make them equal in length.
- A Do not trim too much!

Step 12

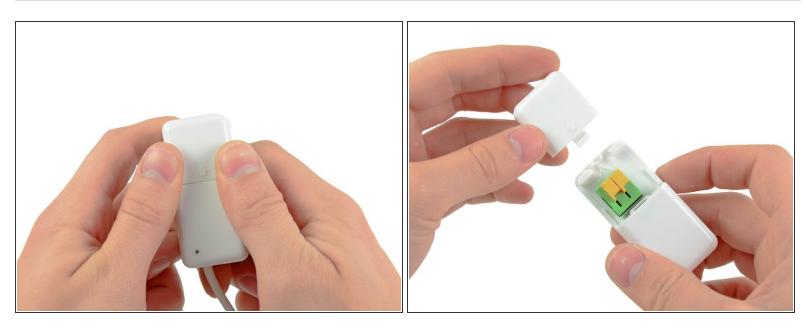

- Locate the Large Magic Box.
- Remove the cover of the Large Magic Box and set it aside.

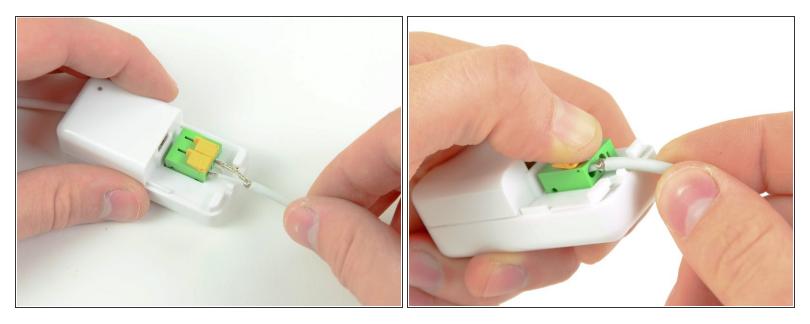

- Before attempting to insert the wires, note their correct orientation. The center wire should be inserted into the positive (+) terminal on the left and the outer wire should be inserted into the negative (-) terminal on the right.
- Use your thumb to push back the orange spring clamps on both terminals and insert both wires into their respective terminals. Insert the wires as far in as possible.
- Make sure that exposed strands of the positive and negative wires do not touch each other when installed in their final positions in the terminals!



• Replace the Large Magic Box cover.




- Congratulations! You just modified the MacBook Power Adapter to be capable of recharging the HyperJuice battery directly.
- To charge a first generation HyperJuice battery, plug the male connector from the Large Magic Box into the CHARGE port on the HyperJuice battery.
- To charge a HyperJuice 1.5 or HyperJuice 2 battery, use the short male to male cable that came in the kit to connect the Large Magic Box to the DC IN port on the HyperJuice Battery.
 - The female connector has the higher voltage required to change the newer batteries.
- (i) The LED light on the Large Magic Box will be **RED** during charging of the HyperJuice battery and will turn **GREEN** when it is done charging.

Step 16 — Modifying MagSafe Cable




- Now let's repeat the process with the MagSafe end of the cable and the Small Magic Box.
- On the the cable with the MagSafe connector, as before, make a mark .75" (2 cm) from the cut end.

Step 17

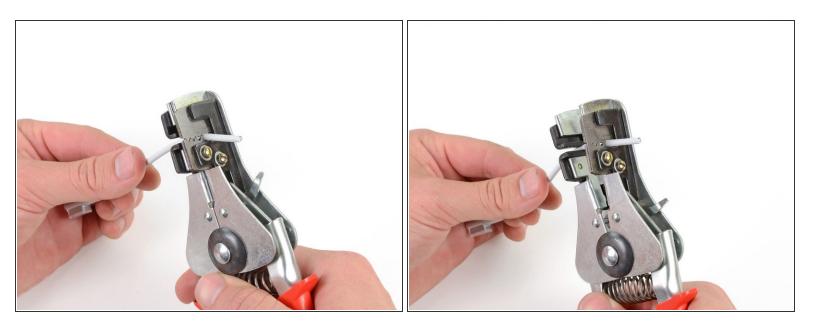


Again, use the largest (innermost) stripping hole to remove the outer cord tubing at the mark you
just made.

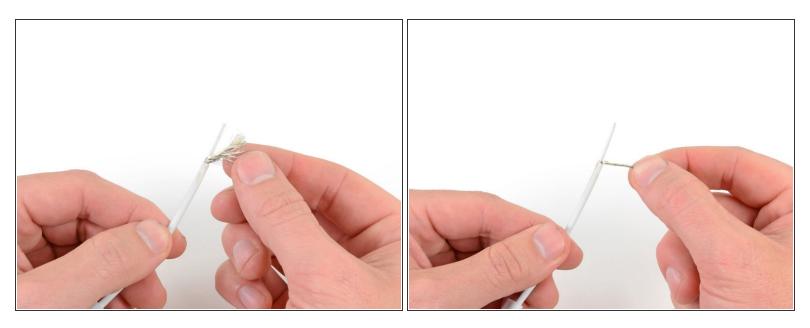


- Unravel the outer loose wire strands and twist them into a single strand.
- (i) If you are handy with a soldering iron, tinning the ground lead after you twist it together will help keep it in one piece.


Step 19

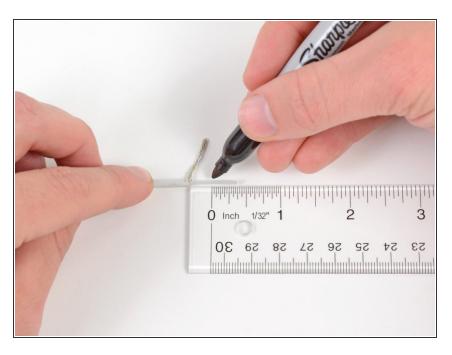

Make a mark on the inner wire 3/8"
 (1 cm) away from the cut end.

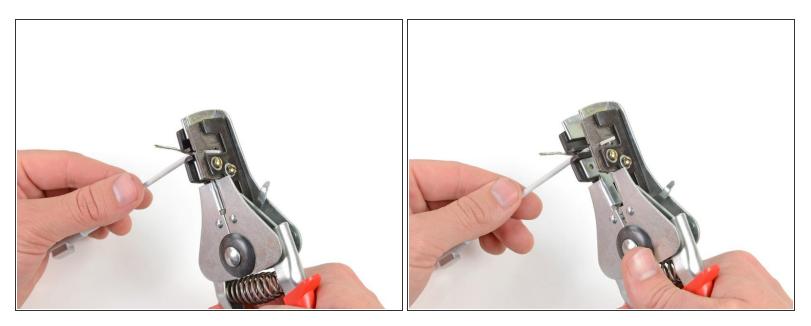


- Align the second smallest hole with the pen mark made in the previous step.
- Strip off the inner tubing at the mark you just made to reveal the center wire strands.

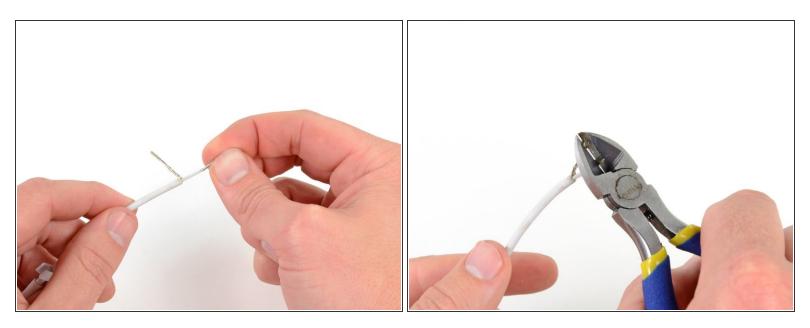


- Twist the center wire strands tightly into a single twisted strand.
- Line up the outer and inner twisted strands side by side and trim the ends of both wires to make them equal in length.

Do not trim too much!

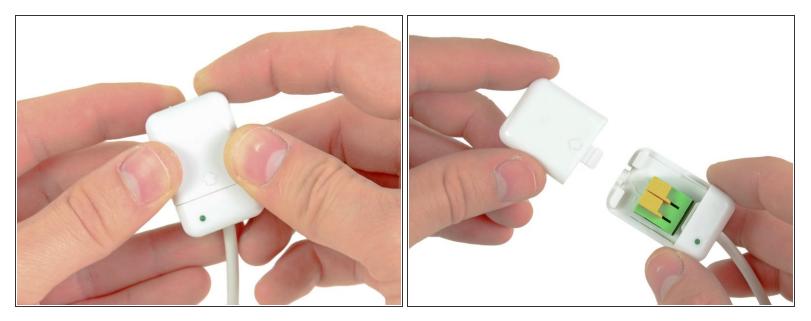

- Locate the Small Magic Box.
- Remove the cover of the Small Magic Box and set it aside.

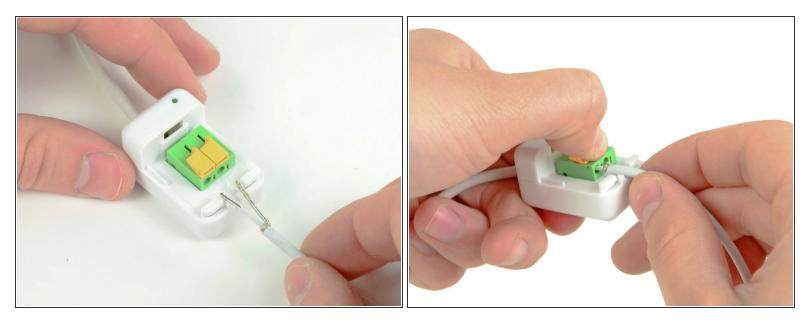

• As in step 13, use your thumb to push back the orange spring clamps on both terminals and insert the center wire into the positive (+) terminal on the left and the outer wire into the negative (-) terminal on the right.

Make sure that exposed strands of the positive and negative wires do not touch each other when installed in their final positions in the terminals!




• Replace the Small Magic Box cover.

Step 25 — Finished



 With that, you have successfully modified the Apple MacBook Power Adapter with the Magic Boxes.

Step 26 — Operation

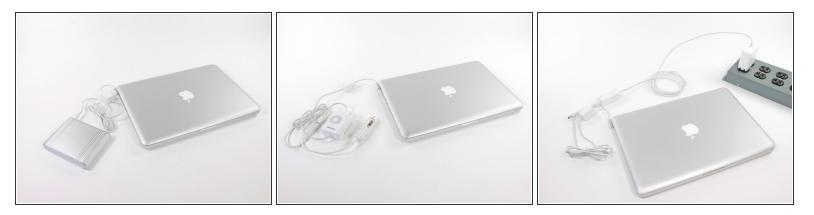

- Use the modified MagSafe Cable to power and recharge your MacBook with HyperJuice external battery. The LED light on the Small Magic Box will light green during use.
- Connect the modified MagSafe Cable to the MacBook Car Charger to power and recharge your MacBook in the car.
- Connect the Small Magic Box to the socket in the Large Magic Box to regain the original functionality of the Apple MacBook Power Adapter, i.e. to power the MacBook. We hope you like our Magic Box solution.