



Microsoft Band 2 Buttons Replacement

This guide will show you how to remove the side buttons on the Microsoft Band 2.

Written By: Chris Syracuse



INTRODUCTION

In the event that the buttons on the side of the Microsoft Band 2 become jammed or unresponsive, follow this guide to learn how to remove them for cleaning or replacement.



TOOLS:

- [Metal Spudger](#) (1)
 - [Heat Gun](#) (1)
 - [T3 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Screen




- ⚠ Wear proper gloves when using a heatgun.
- Use a heatgun to melt the adhesive beneath the screen. Heat the metal around edges of the screen.
- ⓘ Avoid heating the rubber watch band as it will quickly melt.
- ⓘ Heating the LCD screen may damage it. Avoid this procedure unless you intend to replace the screen.

Step 2



- Use a [spudger](#) and plastic [opening picks](#) to pry the screen away from the Band 2.

Step 3

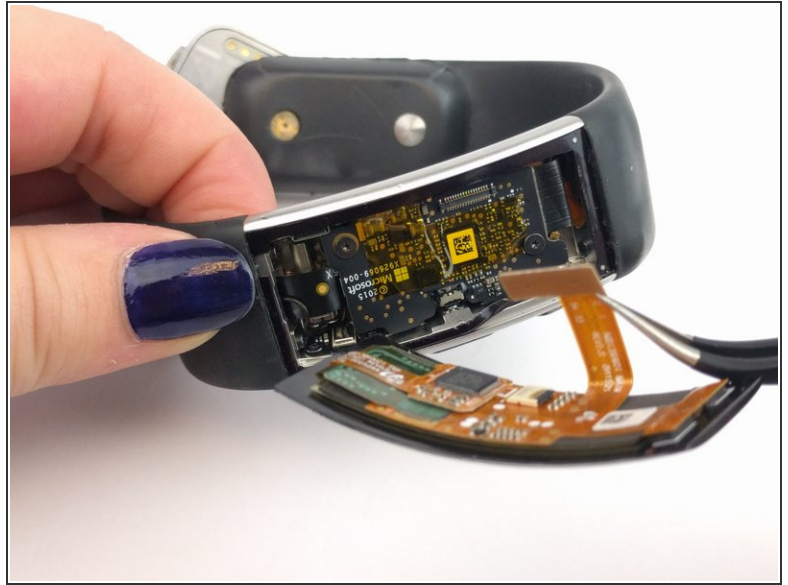


- Use metal tweezers to gently detach the orange press-fit (or "pop") connector.

Step 4 — Buttons




- Use the T3 Torx Screwdriver to remove the two 2.7 mm screws

Step 5

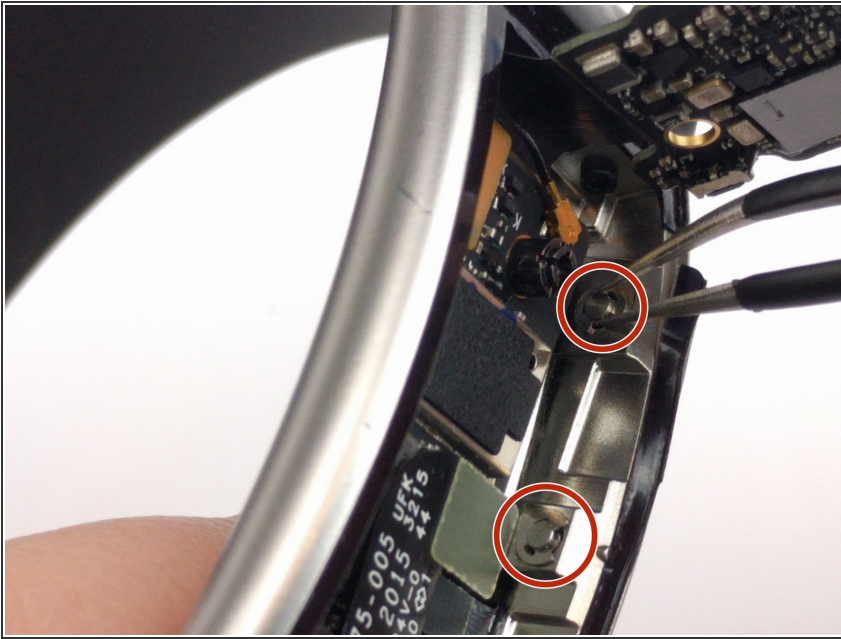

- Lift the logic board and locate the two circular clips securing the buttons from inside the wall of the Band 2. Remove them by sliding the clips sideways.

Step 6

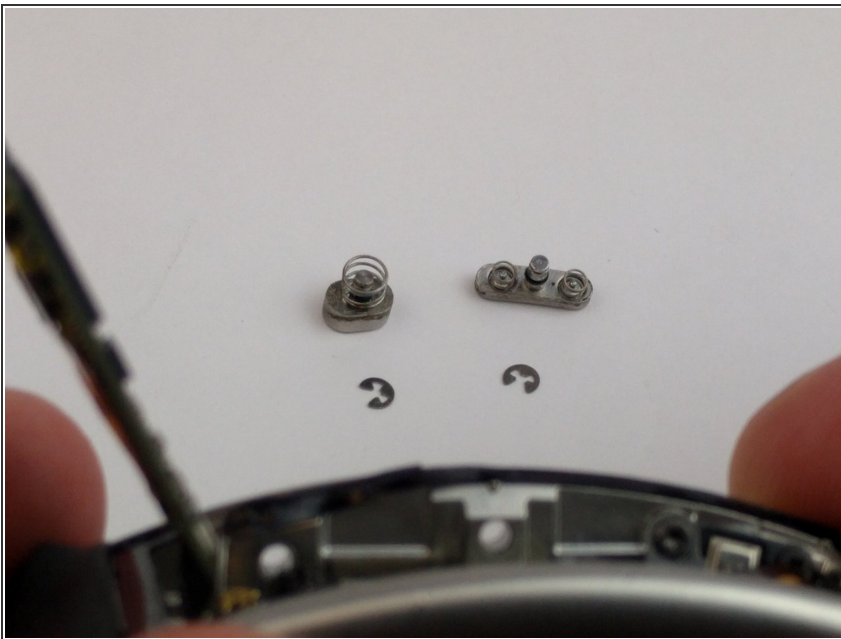

- Remove the buttons, being careful not to lose the springs.

To reassemble your device, follow these instructions in reverse order.