


# Lenovo Ideapad Yoga 2 11 Trackpad Replacement

If your trackpad stops working or has any...

Written By: Andria Chen

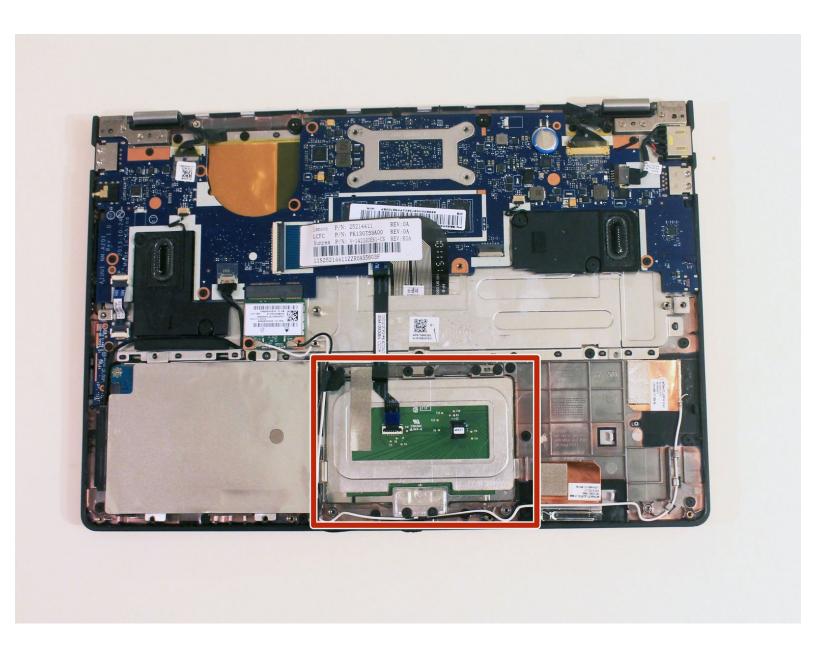

#### **INTRODUCTION**

If your trackpad stops working or has any performance issues, you can follow this guide to remove and replace it.



# TOOLS:


- T5 Torx Screwdriver (1)
- Phillips #000 Screwdriver (1)
- Tweezers (1)

#### Step 1 — Back Panel



 Begin by turning your closed laptop so that you are looking at the bottom panel.

#### Step 2

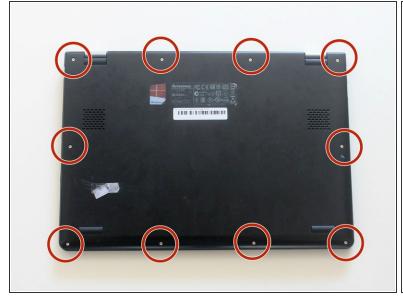




- Locate the 10 screws (6mm) around the border of the panel.
- Using the Torx T5 Screwdriver, remove the screws.



 Now that the screws are removed, gently lift the back panel upwards to detach it from the rest of your laptop.

#### Step 4 — Battery



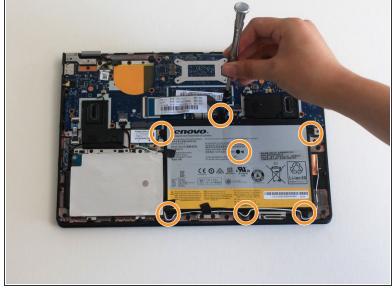

- Locate the battery in the bottom right corner.
- Using a Phillips #000, remove the 6 screws (3.5mm) on the border of the battery and the 7th screw (6.5mm) that is in the center of the battery.








- Locate the cable connecting to the battery. It is located at the top-center of the battery.
- Use a pair of tweezers and place it so that the tweezer is around the cables. Gently pull the cables towards the battery to disconnect the cable.

#### Step 6



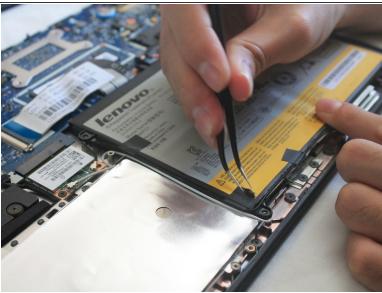


 There may be tape around the edge of the battery to secure some wires. Use a pair of tweezers to remove the tape so that the wires are no longer attached to the battery.






After you have unscrewed the screws, unplugged the cable, and removed the tape and wires, you
can remove the battery from your laptop.

# Step 8 — Trackpad

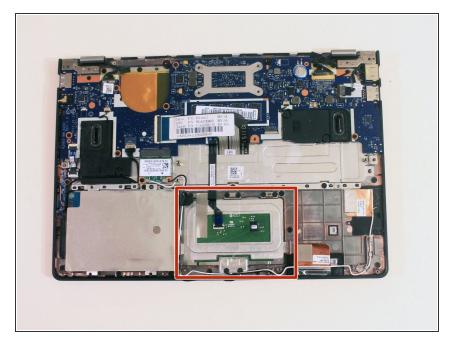


 After removing the battery, locate the trackpad of your laptop.



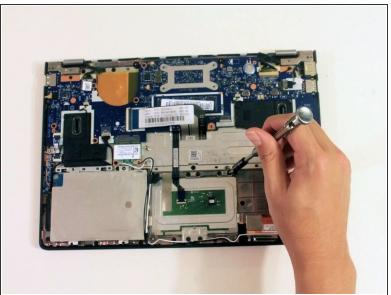


Unscrew 7x 2mm screws holding touchpad in place.

# Step 10

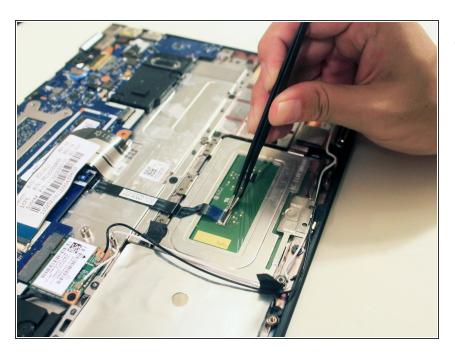


 Lift up the plastic cover over the ribbon cable.

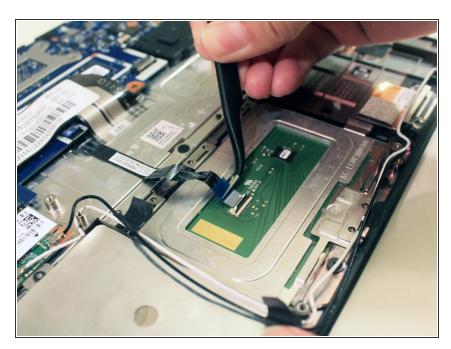

 Gently tug ribbon cable from its position.

# Step 12

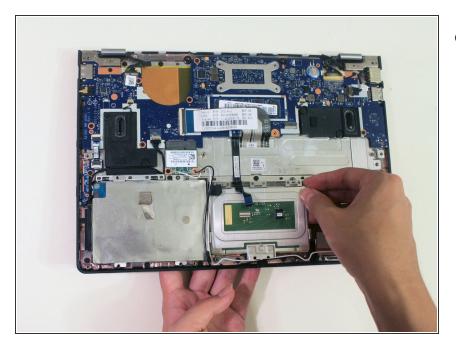

Lift trackpad from the computer.

To reassemble your device, follow these instructions in reverse order.